



ITEM #: MB400CC
Description: MONTBLANC COUNTER CHAIR, 24" BOX SEAT
Product size: 21" x 24" x 43"H

Your furniture purchase is an investment. Furniture can last life times, with a minimum amount of effort. Here are a few tips to properly care for your furniture, ensuring that it looks great year after year.

Wood Furniture Maintenance:

- Always dust, wipe, and clean with the grain of the wood.
- Dust with a soft cloth. Dust will scratch the furniture surface if not removed properly.
- Use the same type of polish consistently as interchanging oil-based and wax-based polishes will cause a build-up and result in a foggy or cloudy appearance.
- If a polished surface become foggy, rub it with a cloth dipped in a solution of one tablespoon vinegar to one quart of water. Rub softly with the grain until the surface is completely dry.
- Soap and water are not advisable for wood surface, causing damage.
- Remember to change dusting cloths frequently as dirty cloths may scratch your furniture's surface.

The Enemies of Wood:

- Moisture is wood's worst enemy. Liquid spills should be gently wiped up immediately. Coasters should be used under all beverages.
- Do not allow rubber or vinyl materials to lie on the furniture. Chemicals in rubber may leave a stain. Put a strip of felt or leather under accessories that have rubber or vinyl.
- Heat creates a chemical change in the furniture's finish, which results in a white spot. Use protective pads under hot dishes, appliances, etc.
- Sunlight's ultraviolet rays can damage the finish of furniture. Do not place furniture directly against a heater or radiator and do not place in the path of hot streams of air from central heating. This will cause extreme localized drying of the wood.

High Gloss Resin Table Maintenance:

- Resin tabletops have approximately 1/8" of a resin coat on the top face of the table, which will resist ice, water, wine, liquor, food, cleaning fluids, and warm or hot liquids; however, cups, glasses, etc, containing hot liquids should not be left on the table without a coaster for protection.
- Resin tabletops will scratch just the same as any other glossy surface and basic precautions should be taken.
- For lasting shine, the resin table should be waxed with a car wax that does not contain silicon. Maintaining this wax build-up will result in a high gloss shine.
- When wiping down the table, a soft, clean rag should be used. Do not use a heavy paper.

Granite Top Maintenance:







- The surface of the granite on your table has been polished or sealed to create a generally non-porous surface. The stone has many natural characteristics including : veining, hairline cracks, and color variations- which make up the stone's beauty.
- To maintain the beauty of your granite:
- Protect surfaces from scratching, staining and etching by
 - * Keeping them free of debris or sharp objects.
 - *Wiping up spills immediately.
 - *Avoiding contact with chemicals (particularly acid-based materials)
 - Clean with pH neutral products or those especially formulated for use on stone.
 - Renew the surface on polished granite (granite with a high gloss surface) by buffing with special stone polish, powder or cream.
- Do not use granite polish on granite with a matte finish, which has been honed rather than polished. (Penetrating sealer may be used on both polished and honed granite)

Marble Top Maintenance:

- Marble may be stone, but it is porous stone and can stain easily. Treating marble surface the same as wood surfaces is a great rule of thumb.
- It is recommended to seal the tops on a regular basis (every 6 to 12 months).
- A good quality stone sealer can be purchased from any tiles/stone store or any homecare store and should be applied according to the manufacturer's recommendation.
- When sealed properly, marble tops can be used indoors and outdoors and can withstand any weather conditions except internal freezing. Snow or freezing rain will penetrate the table and cause cracks.

Caring for the Fabric on Upholstered Furniture:

- Frequent vacuuming of the entire upholstered area will prevent dust from settling in to the fibers.
- Professional cleaning is always recommended for all upholstered pieces.
- Always pre-test a small area of fabric in a inconspicuous area when cleaning before proceeding.
- Do not use cleaning products containing brightening agents.

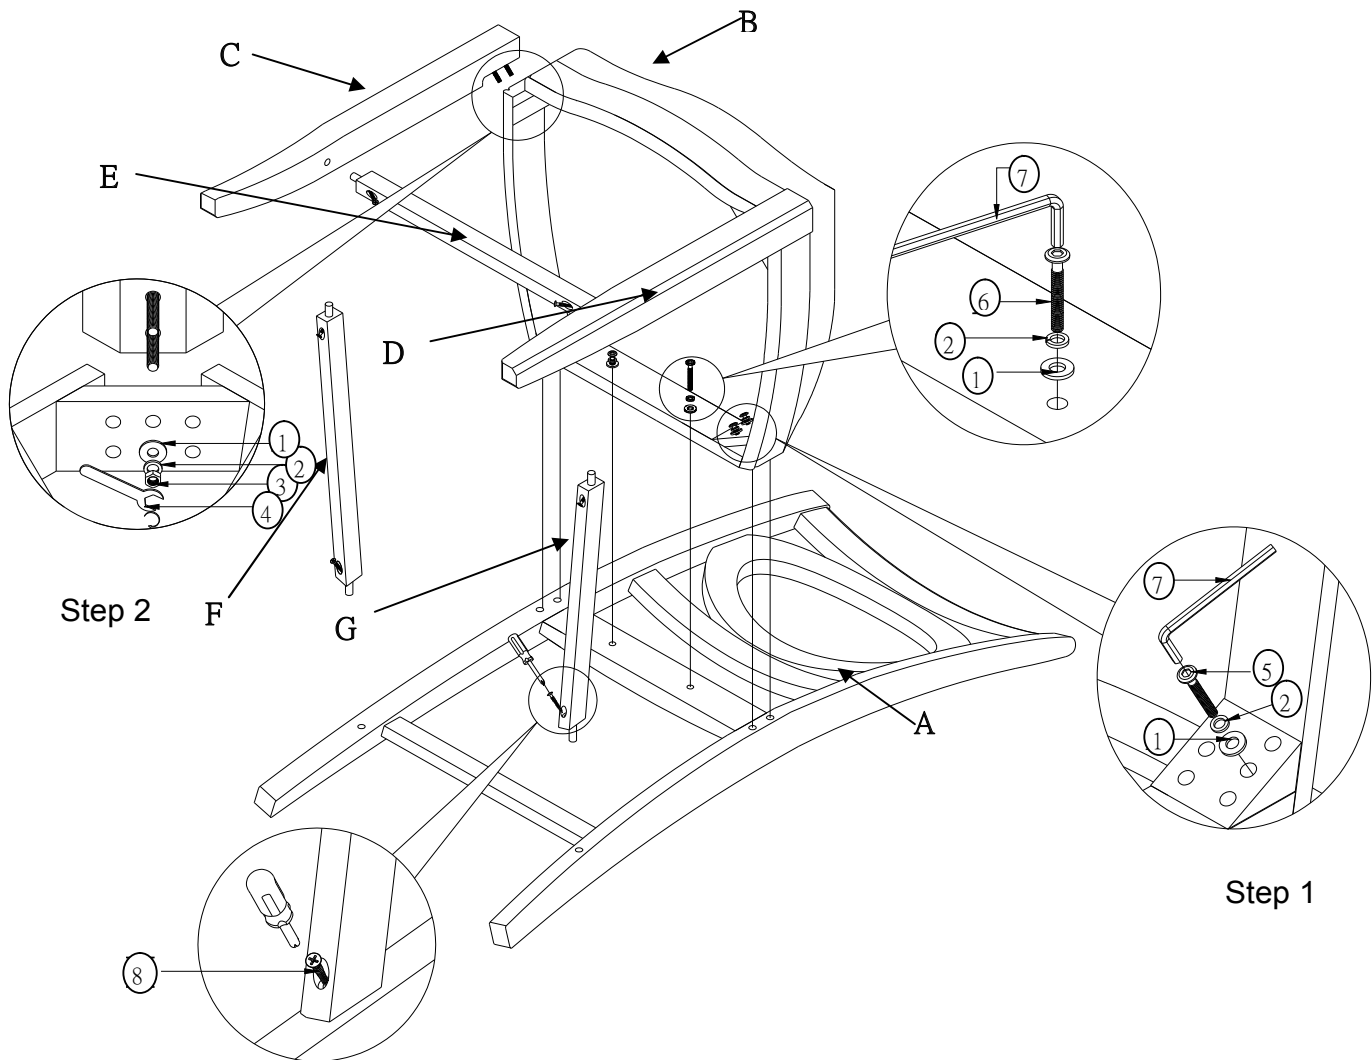
| VERY IMPORTANT !! | | | |
|--|--|--|--|
| <p>NEVER USE GLASS CLEANERS ON FINISHED SURFACE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.</p> | <p>DO NOT WRITE DIRECTLY ON SURFACE</p>  <p>PREVENT MARKING</p> | <p>DO NOT PLACE DIRECTLY IN SUNLIGHT</p>  <p>PREVENT FADING</p> | <p>DO NOT USE PLACEMATS WITH RUBBER BASES</p>  <p>PREVENT DISCOLORING</p> |
| <p>NEVER ALLOW LIQUIDS OF ANY KIND TO LINGER ON SURFACE. ABSORPTION CAUSES THE WOOD TO WARP AND THE FINISH TO DE LAMINATE</p> | <p>DO NOT USE COMMERCIAL POLISHES AND WAXES</p>  <p>PREVENT YELLOWING</p> | <p>DO NOT PLACE HOT POTS, ETC ON SURFACE</p>  <p>PREVENT DAMAGE TO FINISH</p> | <p>DO NOT USE COMMERCIAL POLISHES AND WAXES</p>  <p>PREVENT SPLITTING</p> |

TOC20120620

MB400CC ASSEMBLY INSTRUCTIONS

P. 2/4

DO NOT FULLY TIGHTEN SCREWS AND BOLTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED.



STEP 1:

* Turn the Chair Back (A) upside down.

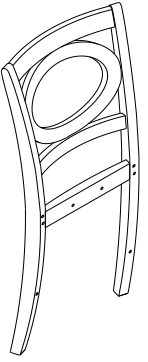
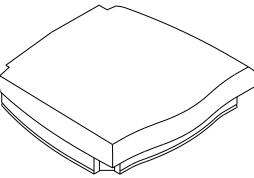


 
 
 
* Attach the Seat Box (B) to the Chair Back (A), insert Flat Washer (1), Spring Washer (2), Long Bolt (5) into the holes at the rear corner and insert Flat Washer (1), Spring Washer (2), Short Bolt (6) into the holes at the rear bar of Seat Box (B). Tighten the bolt with Allen Key (7).

STEP 2:

* Assemble Left (F) and Right (G) Side Stretcher to the Chair Back (A) and secure Screw (8) with Screw Driver (not provided). Attach the Left (C) and Right (D) Front Leg to the corner of Seat Box (B), insert Flat Washer (1), Spring Washer (2), Hex Nut (3) with Wrench (4). Attach the Front Stretcher (E) to the Left (C) and Right (D) Front Leg, secure Screw (8) with Screw Driver (not provided). Fully tighten until levelling the chair.

PARTS LIST

P. 3/4

| (A) CHAIR BACK (1 PC) | (B) SEAT BOX (1 PC) | (C) LEFT FRONT LEG (1PC) | (D) RIGHT FRONT LEG (1PC) | (E) FRONT STRETCHER (1PC) | (F) LEFT SIDE STRETCHER (1PC) | (G) RIGHT SIDE STRETCHER (1PC) |
|---|---|---|---|--|---|---|
|  |  |  |  |  |  |  |

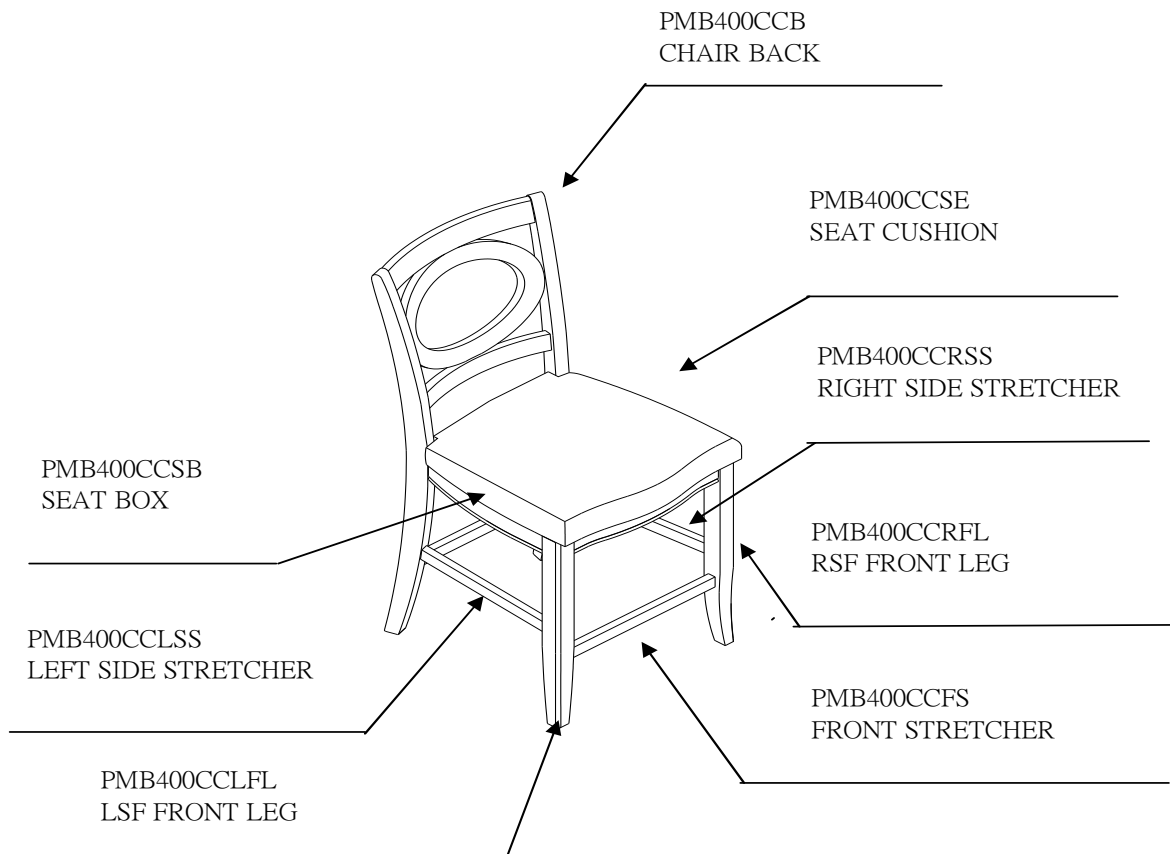
HARDWARE PACK # : PMB400CCH

| NO. | DESCRIPTION | DIMENSION | Q'TY |
|-----|---------------|---|-----------------------------|
| 1 | FLAT WASHER |  | 5/16"*22*2mm 10 PCS |
| 2 | SPRING WASHER |  | 5/16"*13*2mm 10 PCS |
| 3 | HEX NUT |  | 5/16"*12*6mm(W027) 4 PCS |
| 4 | WRENCH |  | 12*2*90mm 1 PC |
| 5 | LONG BOLT |  | 1/4"*15*70mm 4 PCS |
| 6 | SHORT BOLT |  | 1/4"*15*38mm 2 PCS |
| 7 | ALLEN KEY |  | 4*74*29mm 1 PC |
| 8 | SCREW |  | # 8*38mm 6 PCS |

PARTS FOR MB400CC

COMPLETE HARDWARE # : PMB400CCH

P. 4/4



FABRIC CONTENT; POLYESTER 100%

This fabric is not machine washable.
Allow +/-3% residual shrinkage.
Do not use cleaning products containing brightening agents.

Do not mix fabrics of different colors.
The fabric is suitable for drapery and upholstery.



PRODUCT DETAILS

| | |
|--------------|--------------------------|
| SEAT BOX | RUBBER WOOD |
| CHAIR BACK | BENTWOOD AND RUBBER WOOD |
| LEG | RUBBER WOOD |
| PRODUCT SIZE | 21"×24"×43"H |
| CARTON SIZE | 43.3" x 20.07" x 13.38" |
| NET WEIGHT | 46.2 LBS/ 2 PCS |
| GROSS WEIGHT | 57.2 LBS / 2 PCS |
| CU. FT. | 6.73' / 2 PCS |

MADE IN VIETNAM