


48"W CORNER TV STAND

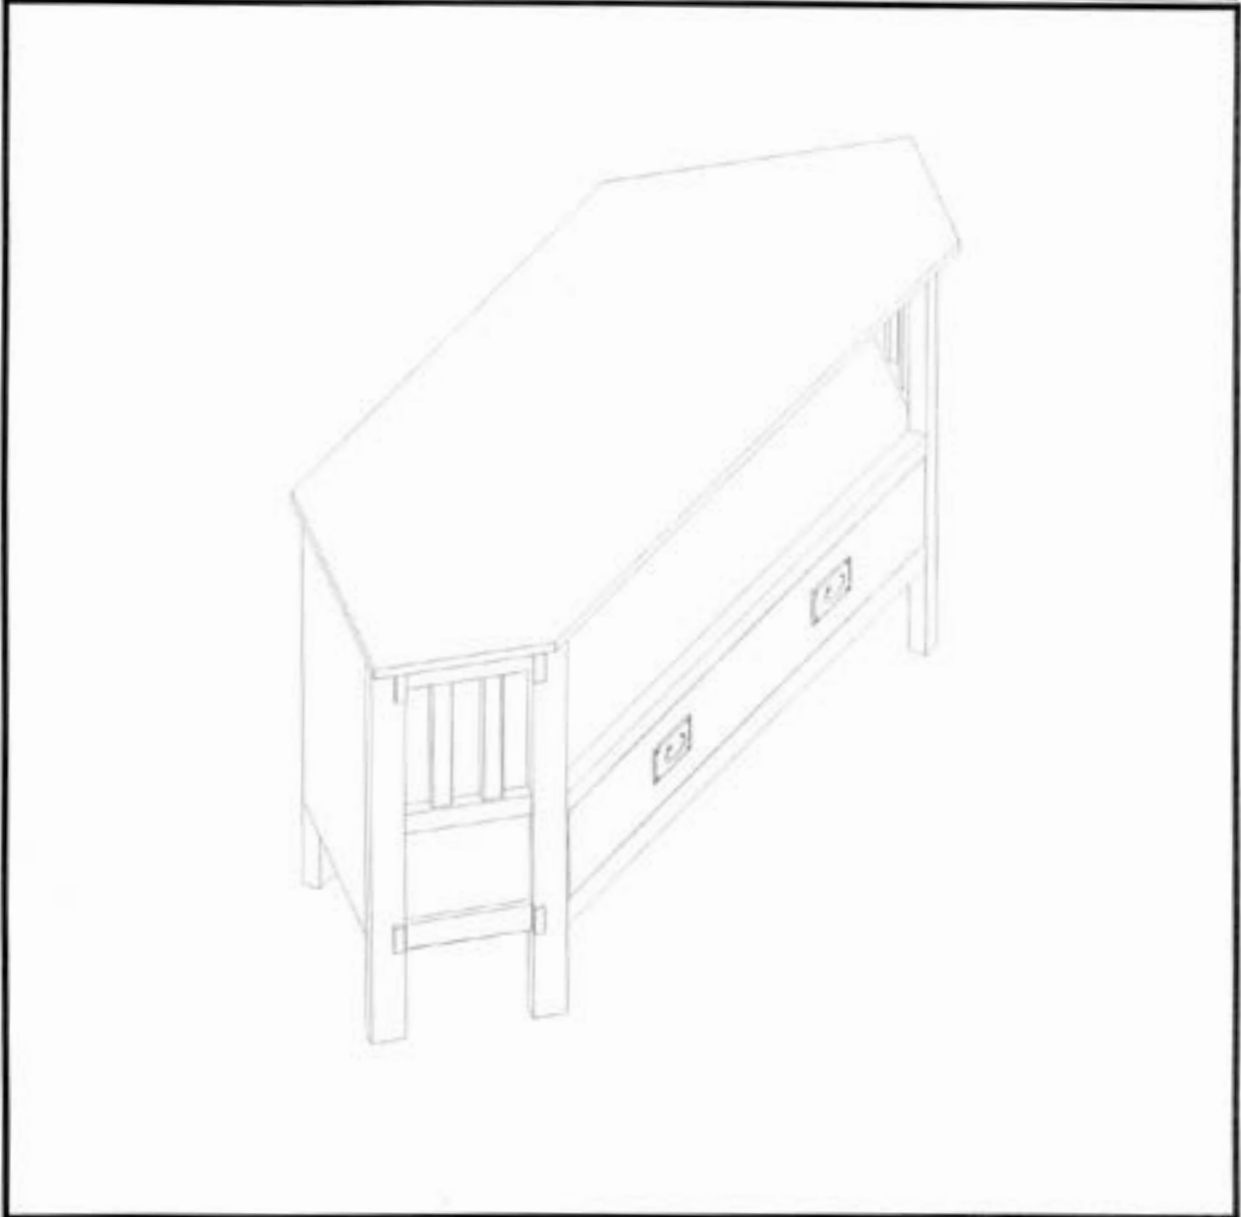














Assembly Instructions

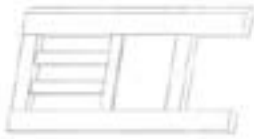

 
48"W CORNER TV STAND











Parts List

Please review all parts and hardware before disposing of any packaging. Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below. You may receive extra hardware with your unit.

<p>A</p>  <p>Quantity of 1</p> <p>Right Back Frame</p>	<p>B</p>  <p>Quantity of 1</p> <p>Back Panel</p>
<p>C</p>  <p>Quantity of 1</p> <p>Left Back Frame</p>	<p>D</p>  <p>Quantity of 1</p> <p>Shelf Panel</p>
<p>E</p>  <p>Quantity of 1</p> <p>Wood guide slide</p>	<p>F</p>  <p>Quantity of 1</p> <p>Lower front rail</p>
<p>G</p>  <p>Quantity of 1</p> <p>Right Side Frame</p>	<p>H</p>  <p>Quantity of 1</p> <p>Left Side Frame</p>
<p>I</p>  <p>Quantity of 1</p> <p>Top Panel</p>	<p>J</p>  <p>Quantity of 1</p> <p>Left side panel of drawer</p>
<p>K</p>  <p>Quantity of 1</p> <p>Drawer back panel</p>	<p>L</p>  <p>Quantity of 1</p> <p>Right side panel of drawer</p>
<p>M</p>  <p>Quantity of 1</p> <p>Drawer bottom panel</p>	<p>N</p>  <p>Quantity of 1</p> <p>Drawer front panel</p>
<p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>	<p>O</p>  <p>Quantity of 2</p> <p>Drawer Bottom Brace</p>

Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



<p>1</p>  <p>Quantity of 26</p> <p>Wood Dowel (Ø8*30MM)</p>	<p>2</p>  <p>Quantity of 20</p> <p>Cam Bolt</p>
<p>3</p>  <p>Quantity of 20</p> <p>Cam Lock</p>	<p>4</p>  <p>Quantity of 2</p> <p>Wood Screw (Ø8*1-1/4")</p>
<p>5</p>  <p>Quantity of 2</p> <p>Handle</p>	<p>6</p>  <p>Quantity of 4</p> <p>Bolt</p>
<p>7</p>  <p>Quantity of 2</p> <p>Drawer stopper</p>	<p>8</p>  <p>Quantity of 2</p> <p>Wood Screw (Ø3*12MML)</p>
<p>9</p>  <p>Quantity of 8</p> <p>Wood Dowel (Ø6*30MM)</p>	<p>10</p>  <p>Quantity of 4</p> <p>Flat screw (Ø1/4*1")</p>

Care and Cleaning Instructions:
 Before using, wipe with a clean, dry cloth.
 Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

Assembly Tool Required
No.2 Phillips Screwdriver (Not Included)



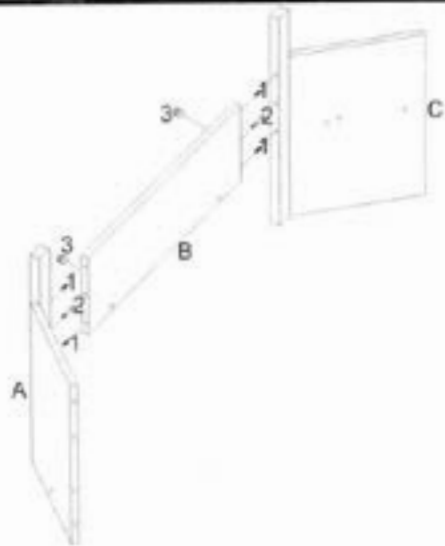


Figure 1

Assembly Instructions:

Wood may scratch easily, Be careful when assembling. Do not scratch.

Step 1 Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.

Step 2 Connect the Left and Right Back Frame (A, C), the Back Panel (B) with 4pcs Wood Dowel (1), 2pcs Cam Bolts (2) and 2pcs Cam Lock (3).

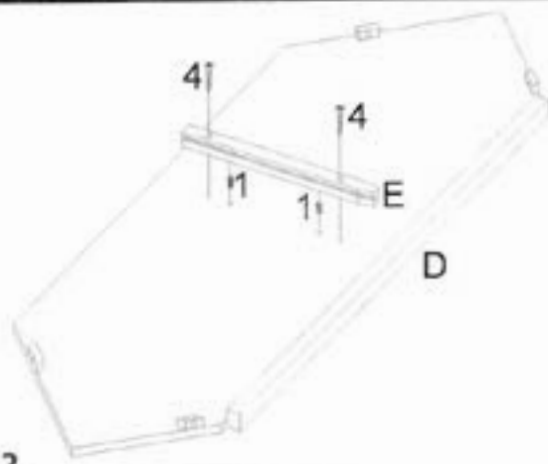


Figure 2

Attach the Drawer Guides (E) to the Shelf Panel (D) with 2pcs Wood Dowels (1) and 2pcs Wood Screws (4).

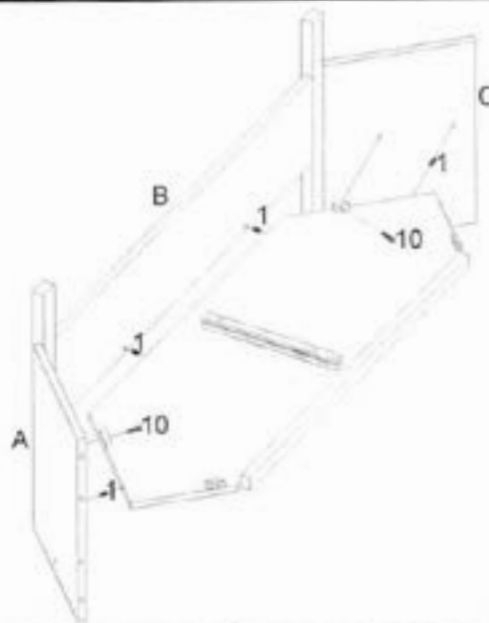


Figure 3

Attach the unit assembled at STEP1 to the unit assembled at STEP2 with 2pcs flat screw (10), 4pcs Wood Dowel (1).



Figure 4

Attach 1pc Plastic Drawer Stopper (8) to Lower front rail (F) with 1pc Wood Screw (7) as shown.

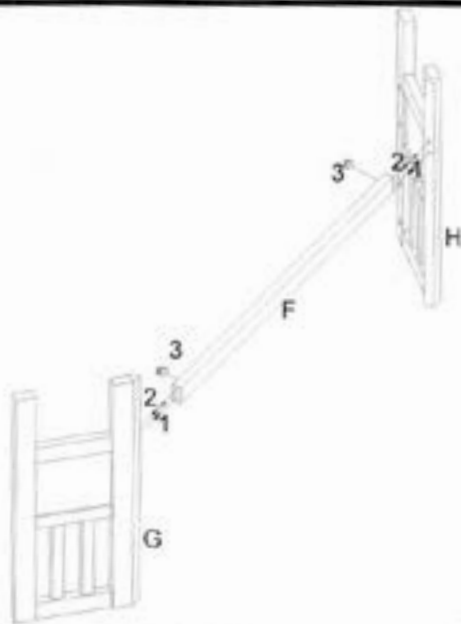


Figure 5

Connect the Lower Front rail (F) to the Left and Right Side Frame (G, H) with 2pcs Wood Dowels (1), 2pcs Cam Bolts (2) and 2pcs Cam Locks (3).

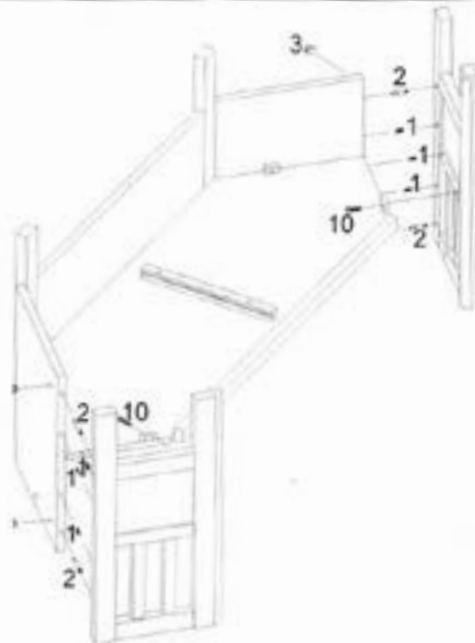



Figure 6

Connect the assembled unit at STEP3 and STEP5 with 6pcs Cam Bolt (2), 4pcs Cam Lock (3) and 4pcs Wood Dowel (1). Then use 2pcs flat screw(10) to tighten them




Figure 7

Connect the Top Panel (1) with 8pcs Wood Dowel (1), 4pcs Cam Bolts (2) and 4pcs Cam Locks (3).

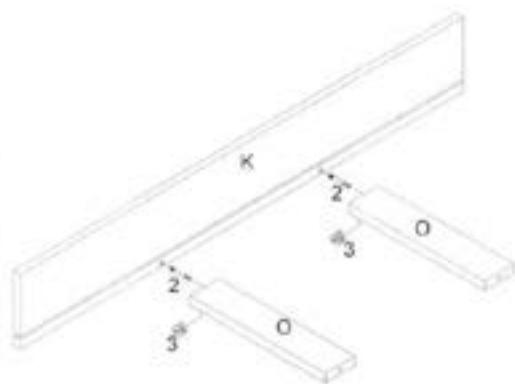

Connect 2pcs Drawer Bottom Brace (O) to Drawer Back Panel (K) with 2pcs Cam Bolts(2) & 2pcs Cam Locks(3)

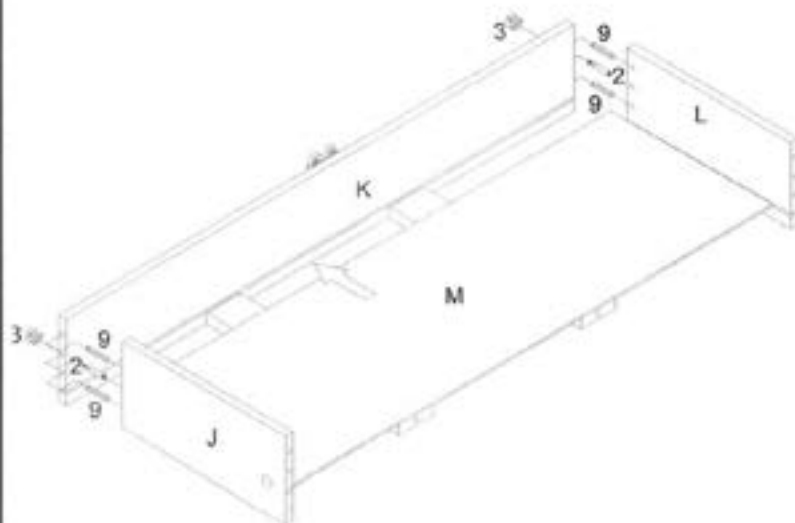

Connect 2pcs Drawer Side Panel (J & L) to Drawer Back Panel (K) with 2pcs Cam Bolt (2), 2pcs Cam Lock (3) & 4pcs Wood Dowels (9). Slide Drawer Bottom Panel (M) into slotted in Drawer Side Panels (L, J) & Drawer Back Panel (K) properly.

Figure 8

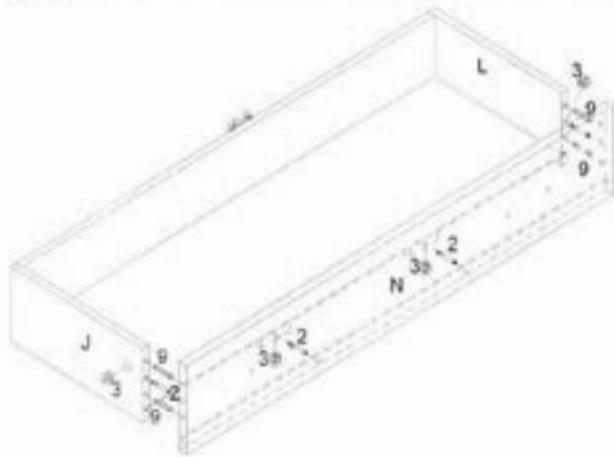


Figure 9

Connect Drawer Front Panel (N) to Drawer Side Panels (J, L) & Drawer bottom brace (O) with 4pcs Cam bolt (2), 4pcs Cam Lock (3) & 4pcs Wood Dowel (9)

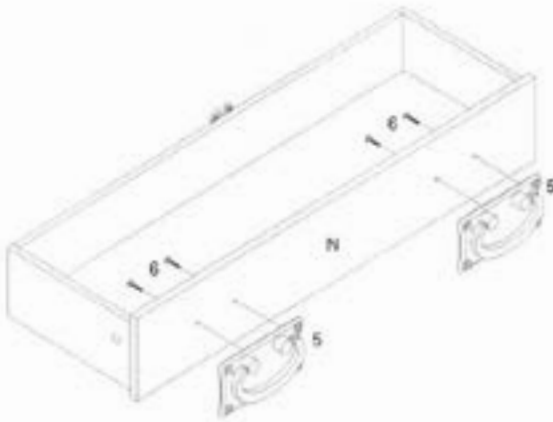


Figure 10

Attach 2pcs Handle (5) to Drawer Front Panel (N) with 4pcs Bolts (6).



Figure 11

Insert the Drawer into the TV Stand.

Now you Corner TV Stand are finish assembled and ready to use!