

Model #50932 Off White w/Sand  
 Model #50933 Off White w/Stone

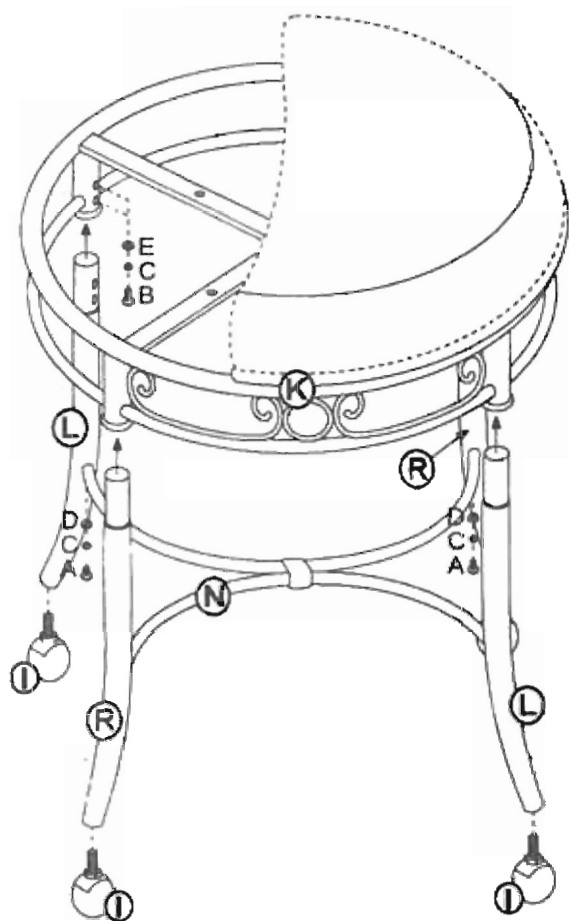
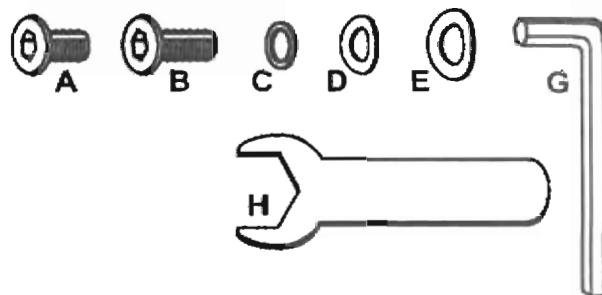
Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

**HARDWARE LIST**

- A (4) Allen Bolts 1/4" x 1/2"  
 B (8) Allen Bolts 1/4" x 5/8"  
 C (12) Spring Washers 1/4"  
 D (4) Camber Washers 1/4" x 13mm  
 E (8) Camber Washers 1/4" x 16mm  
 G (1) Allen Wrench 1/4"  
 H (1) Hex Wrench 5/16"  
 I (4) Casters

**PARTS LIST**

- K (1) Seat  
 L (2) Left Legs  
 R (2) Right Legs  
 N (1) Support Brace

**STEP 1**

Begin assembly by attaching each Leg (L & R) to the bottom of the Seat (K) by inserting each in place, making sure each Leg is in the right position.

**STEP 2**

Once in place, secure from the inside using 2 Allen Bolts (B), 2 Spring Washers (C) & 2 Camber Washers (E) per each leg. Do not fully tighten bolts for this step.

**STEP 3**

Next attach the Support Brace (N) to each Leg (L & R) by aligning holes and securing from the bottom with 1 Allen Bolt (A), 1 Spring Washer (C) & 1 Camber Washer (D). Tighten all bolts from Steps 1 and 2 using the Allen Wrench (G) that has been provided.

**STEP 4**

Finally attach each Caster (I) to the bottom of each Leg (L & R) by inserting in place and tightening with the Hex Wrench (H) that has been provided. The assembly is now complete.