


Kinetic Pinwheel Assembly Instructions

- Parts:** A. Lower Foot Stake
 B. Upper stake
 C. C1 (2 pieces) and C2 (2 pieces)
 D. Screws (8)

Step 1: Screw the upper stake (B) onto lower stake (A).






Step 2: Unscrew the side knobs from upper stake (B).

Step 3: Screw the wheel part (C2) into wheel part (C1) with screws (D). Repeat for other wheel.

Step 4: Slide wheels onto stake matching the direction of the arrows . Screw on side knobs to secure.

Step 5: Remove the rubber protectors from all stakes.

Step 6: Carefully push both sides of the Foot Stake into the ground, keeping equal pressure on both sides. Do not use excessive pressure unevenly as it may cause damage to the Foot Stake.

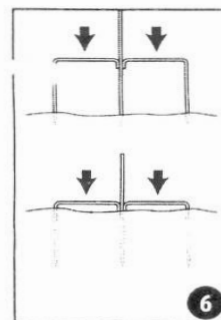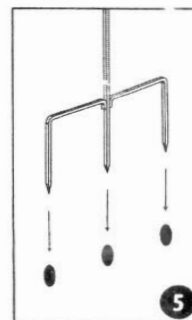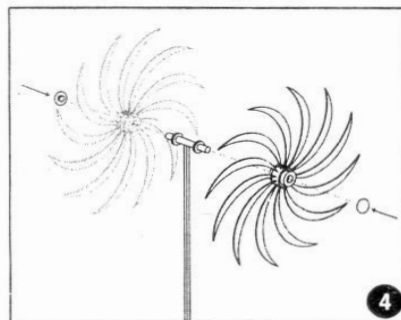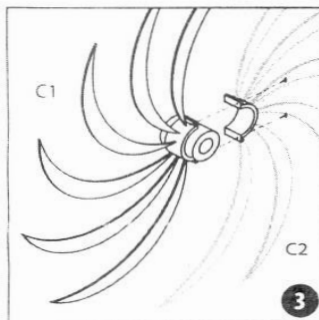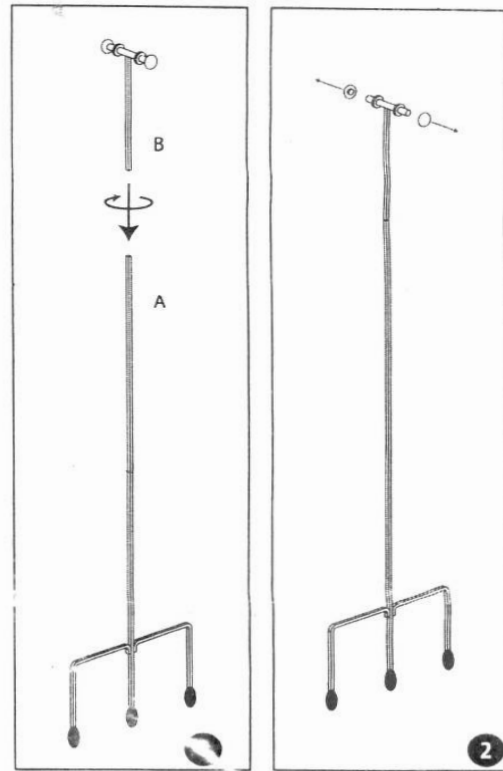

ANCIENT  GRAFFITI™

300 East Route 22, Lake Zurich, IL 60047

TOC20120720