



UTTERMOST

Thank you for purchasing an Uttermost lamp. We hope you are as proud to display this lamp as we were to make it.

Each lamp is hand finished one at a time, therefore no two are exactly alike.

Remove the wrapping on the lamp shade, scissors will help, but be careful not to damage the shade.

The Uttermost finial disc is to be placed on the top of the harp, under the shade spider, as shown in the diagram.

Again, thank you for purchasing an Uttermost lamp.

 
Assembly instructions

1. Place harp onto saddle, then place the shade onto the harp.
2. Place shade onto Uttermost finial disc, then fasten finial onto harp to fix shade.

Important Safety Instructions


This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 5587325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com

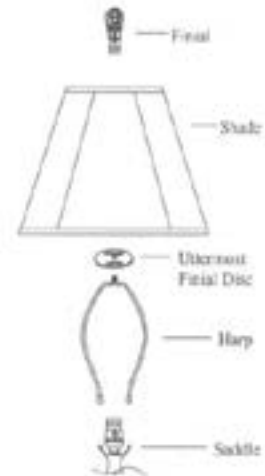



UTTERMOST

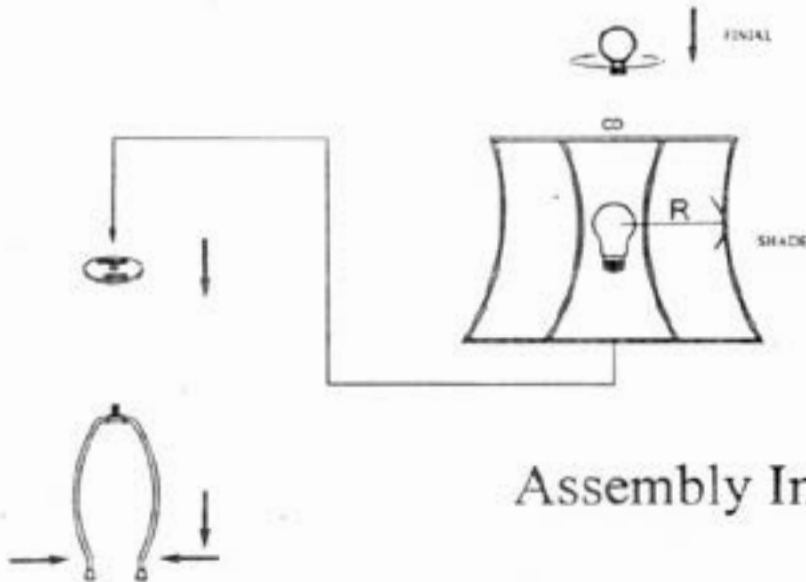 

Assembly Instruction

STYLE NO.:26922

 
1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.



CAUTION: IN ACCORDANCE WITH THE UL REGULATION. THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUAL TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

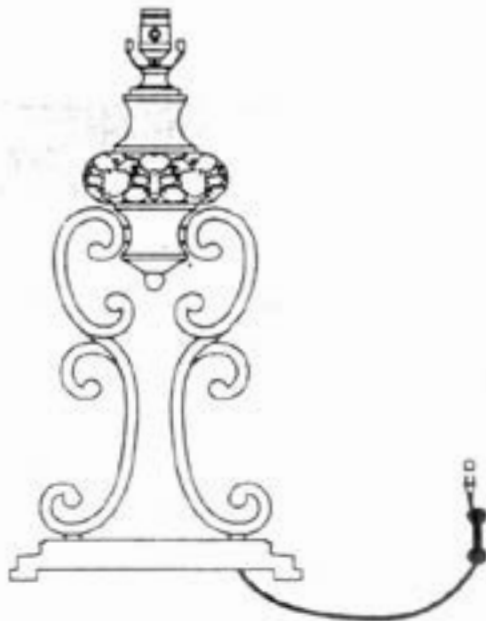

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com