

# UNIVERSAL DINING TABLE

Model #4447-812 Metal Dining Table Base

Model #4447-813 Wood Top & Base


 
Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required.

## HARDWARE LIST


- A (4) Long Allen Bolts
- B (12) Short Allen Bolts
- C (16) Spring Washers
- D (16) Metal Washers
- E (1) Allen Wrench

## PARTS LIST

- F (2) Leg Panels
- G (1) Complete Leg Panel
- H (1) Wood Top
- J (1) Wood Bottom

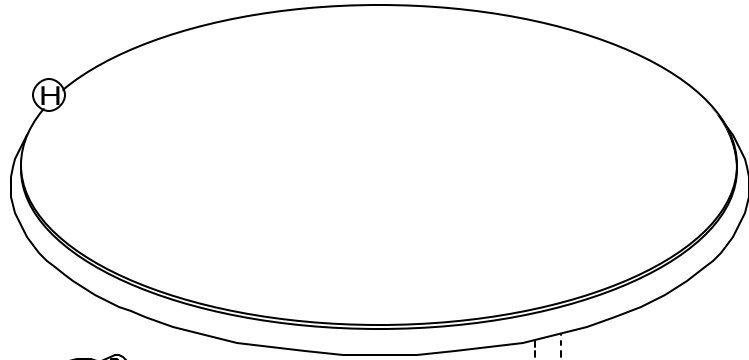

*Drawing of Table shown here is only a generic drawing of the original item you purchased. Parts and Hardware may not be drawn to exact size.*

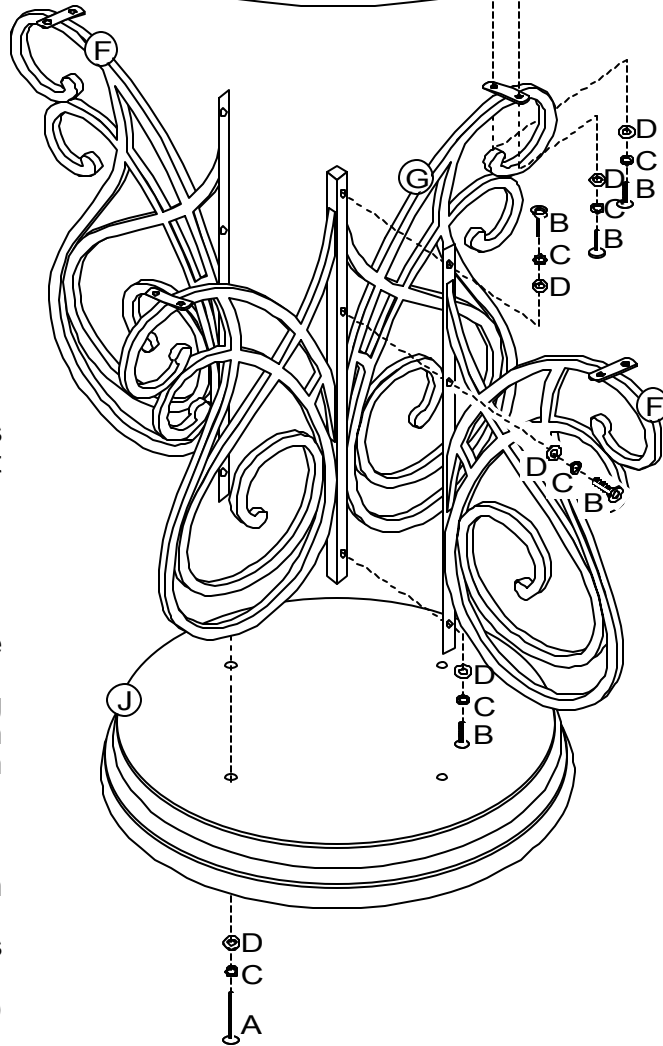

### STEP 1

Begin assembly by attaching both Leg Panels (F) to Complete Leg Panel (G), using 3 Short Allen Bolts (B), 3 Spring Washers (C) & 3 Metal Washers (D) per each Leg Panel. Tighten all bolts only using Allen Wrench (E) provided.

### STEP 2

Next, attach Wood Bottom (J) to bottom side of both Leg Panels (F) & Complete Leg Panel (G), using 1 Long Allen Bolt (A), 1 Spring Washer (C) & 1 Metal Washer (D) per each Leg half. Tighten all bolts only using Allen Wrench (E) provided.

### STEP 3

Finally, attach Wood Top (H) to top side of both Leg Panels (F) & Complete Leg Panel (G), using 2 Short Allen Bolts (B), 2 Spring Washers (C) & 2 Metal Washers (D) per each Leg half. Tighten all bolts only using Allen Wrench (E) provided. The assembly is now complete.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.