

# Assembly Instructions

L317869DS

- 1) Locate the part of the Cord (1) that the plug is on. It can be found on the back of the Lamp Base (2), close to the bottom.
- 2) Pull the Cord (1) (with the plug) away from the Lamp Base Bottom (2) until the Neck (3) reaches the top of the Base (2).
- 3) Screw the Neck (3) of the lamp into the Base (2). Pull the cord taut and screw in the neck until it becomes secure.
- 4) Add the Harp (4) on to the saddle located on the Neck (3)
- 5) Add the Shade (5) onto the Harp (4)
- 6) Add the Finial (6) onto the Harp (4)

*\*Please note that the screw, that attaches the Finial (6) to the Harp (4), is movable. If the shade appears to be askew, check this screw and adjust it – if needed – so it points straight up.*

**CAUTION** - Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

**WARNING** - Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

**IMPORTANT SAFETY INSTRUCTIONS** This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

