

ASSEMBLY INSTRUCTIONS

PL4760

1. FASTEN POLE-A ONTO THE BASE.
2. FASTEN POLE-B ONTO POLE-A.
3. FASTEN THE SOCKET ASSEMBLY ONTO POLE-B.
4. PLACE THE HARP ONTO SADDLE.
5. PLACE THE SHADE ONTO HARP AND TIGHTEN FINIAL.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

