

BEFORE UNPACKING READ THESE INSTRUCTIONS

CAUTION: Indoor use only. Risk of electric shock. Dry locations only. To avoid fire and electric shock:

Do not install on trees having needles, leaves or branch coverings of metal or materials that look like metal.

Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.

Keep away from children.

Unplug the product when leaving the house, when retiring for the night or if left unattended.

Contents includes:

- (1) Porcelain fiber optic Angel.
- (1) spare mini-bulb(selected models)
- (1) AC Adapter

Halogenbulb replacement instructions: Wait a few minutes before starting to allow the bulb to cool down.


Make certain the product is unplugged

To unplug, grab adapter and remove from receptacle or other outlet device. Do not pull on the cord.

STEP 1:

Lift costume on back of figure to reveal the fiber optic bulb assembly, as shown at right.

STEP 1

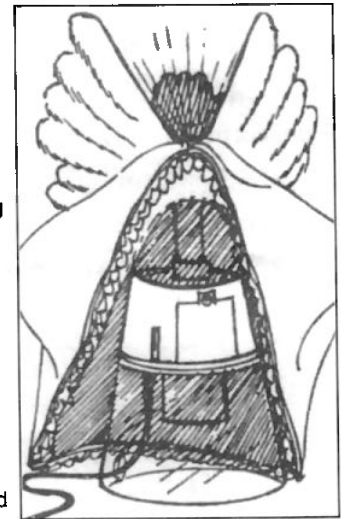

STEP 2:

1. Follow the specific instructions, as shown in STEP 1 above, to reveal the fiber optic bulb assembly unit for the display figure you have.
2. Remove the screw, the circle arrowhead indicates represents the screw in Fig 1 before sliding bulb assembly straight out as shown in fig.2. Do not disconnect or remove any wires.
3. With needle nose pliers, carefully detach the two anchor springs by lifting them out of bulb edge, as shown in Fig.3-3.
4. Remove the burnt bulb by gently pulling up on bulb, as shown in Fig. 3-5 dispose of properly.
5. Replace with new bulb by gently pushing it down into bulb socket as shown in Fig.3.
6. Return two springs to their original positions by gently stretching each spring up, as shown in Fig.3-3.
7. Slide bulb assembly straight back into unit, as shown in Fig.1-2.

NOTE: 1. To avoid potential accidental burning, a sensor audio device, as a switch, assembled inside once the motor stop turning the halogen bulb will auto-shut down, vice versa, if the bulb broken, the motor will stop turning temporarily, in this case, you only need do as STEP 2 to change a bulb.

STEP 2



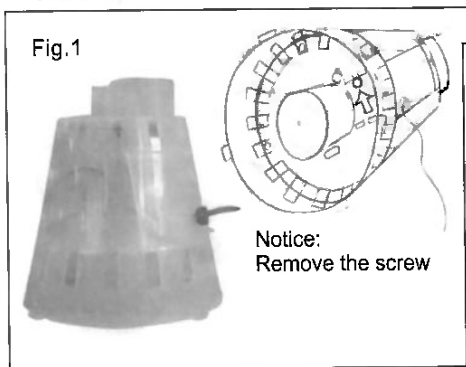



Fig.2

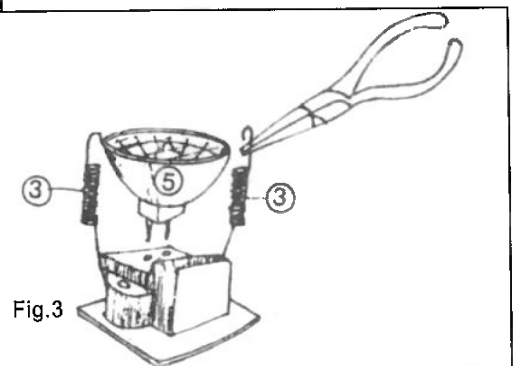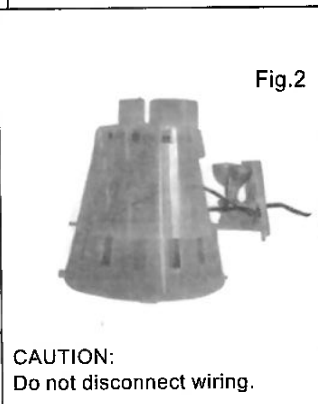

* Continued from first page

Mini-bulb replacement instructions: 12 volt bulb only. Some Models may not contain this feature.

1. Remove assembly from Angel. To replace bulb, gently separate Star (1) from bulb socket (3).
2. Pull bulb (2) straight out and properly dispose.
3. Replace with new bulb (2), included, making sure that the contact wire on each side of base is straight. Do not force bulb into base. It will seat correctly if lined up properly.
4. Replace Star (1) over bulb/base snugly. Return assembly into Angel's hand.

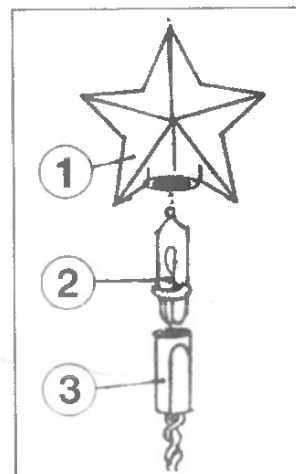

Please be noted that not all Angel products have the full set device
Show at right, without the star on top will do.

This product employs a specially designed AC Adapter for Indoor use in dry locations.
Use only with this product. For proper performance, replace only with UL Listed
Adapter Model number as shown on Adapter.



DO NOT:

1. Connect this Adapter to any other product type.
2. Use if Adapter, cord or connecting pin are damaged in any way.
3. Disassemble or alter in any way.

WARNING: Misuse of this product may cause electric shock

INSTRUCTIONS FOR PLACEMENT OF THE SET ON TREE

1.
INSERT
HOLDER
INTO
BOTTOM
OF
THE
SET

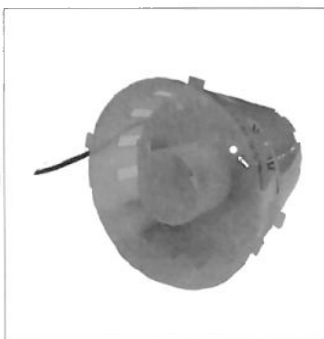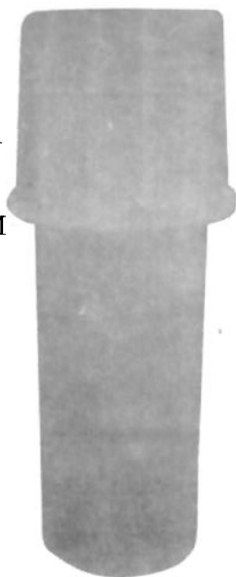

- 2.

PLACE THE SET
ON TOP OF TREE

