

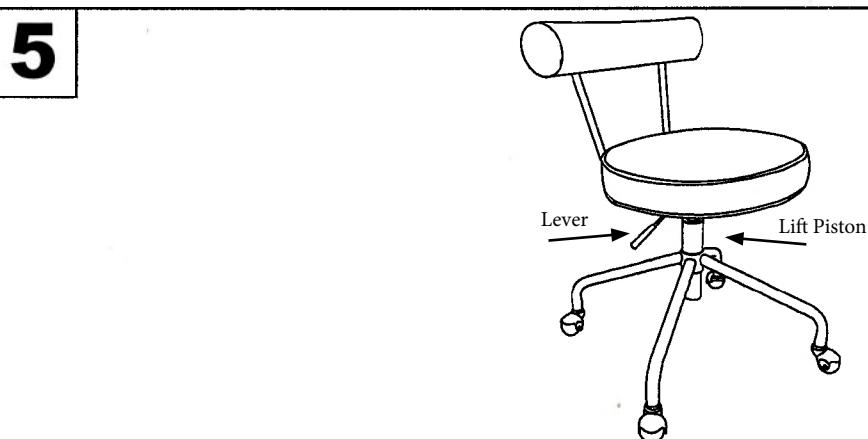
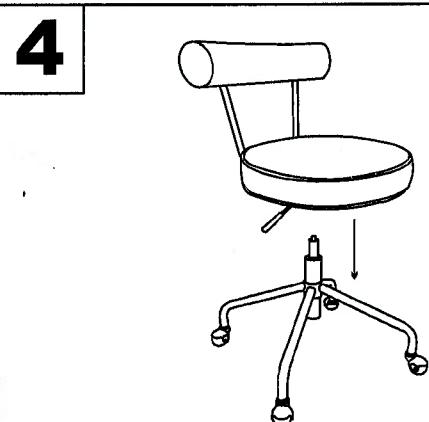
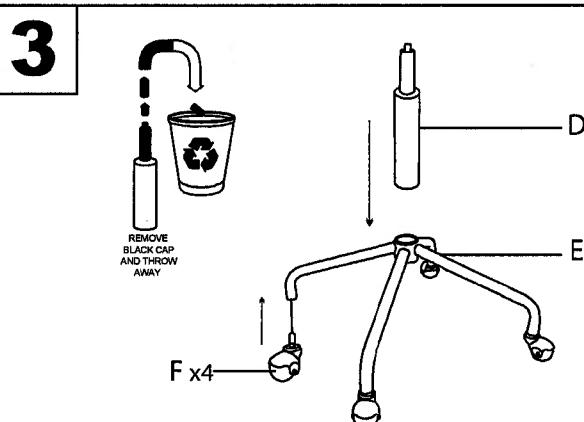
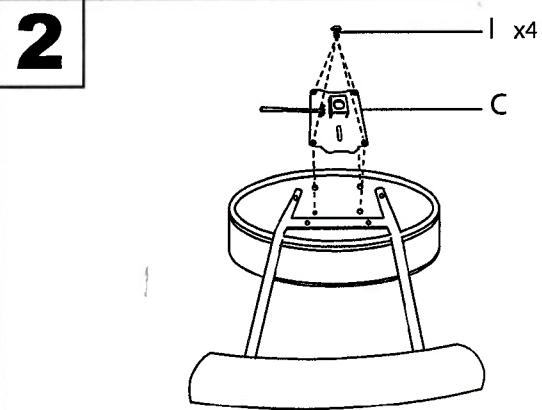


# Assembly Instructions

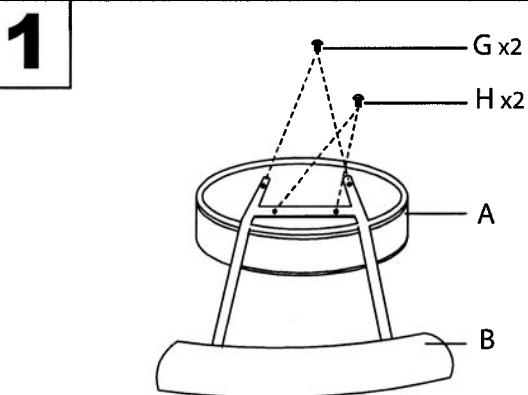

To activate the Lift Piston (Part D), apply weight by sitting in the chair; raise the seat using the lever.

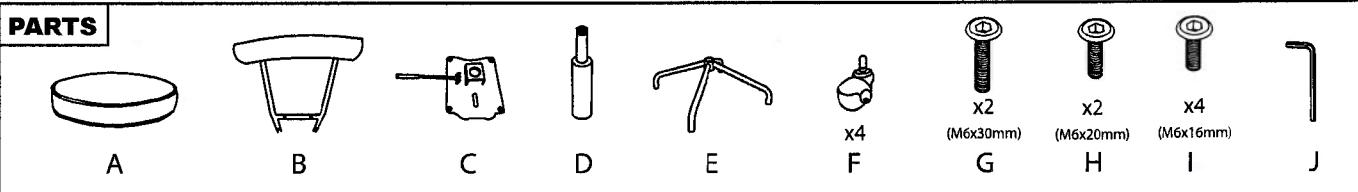

**Do not over tighten.**  
**Do not use power tools to assemble.**