


Assembly Instructions

Whirligig Wind Spinner

PART LIST		
A		2PCS
B		1PC
C		1PC
D		2PCS
E		16PCS
F		1PC
G		1PC
H		1PC
I		1PC
J		1PC
K		1PC

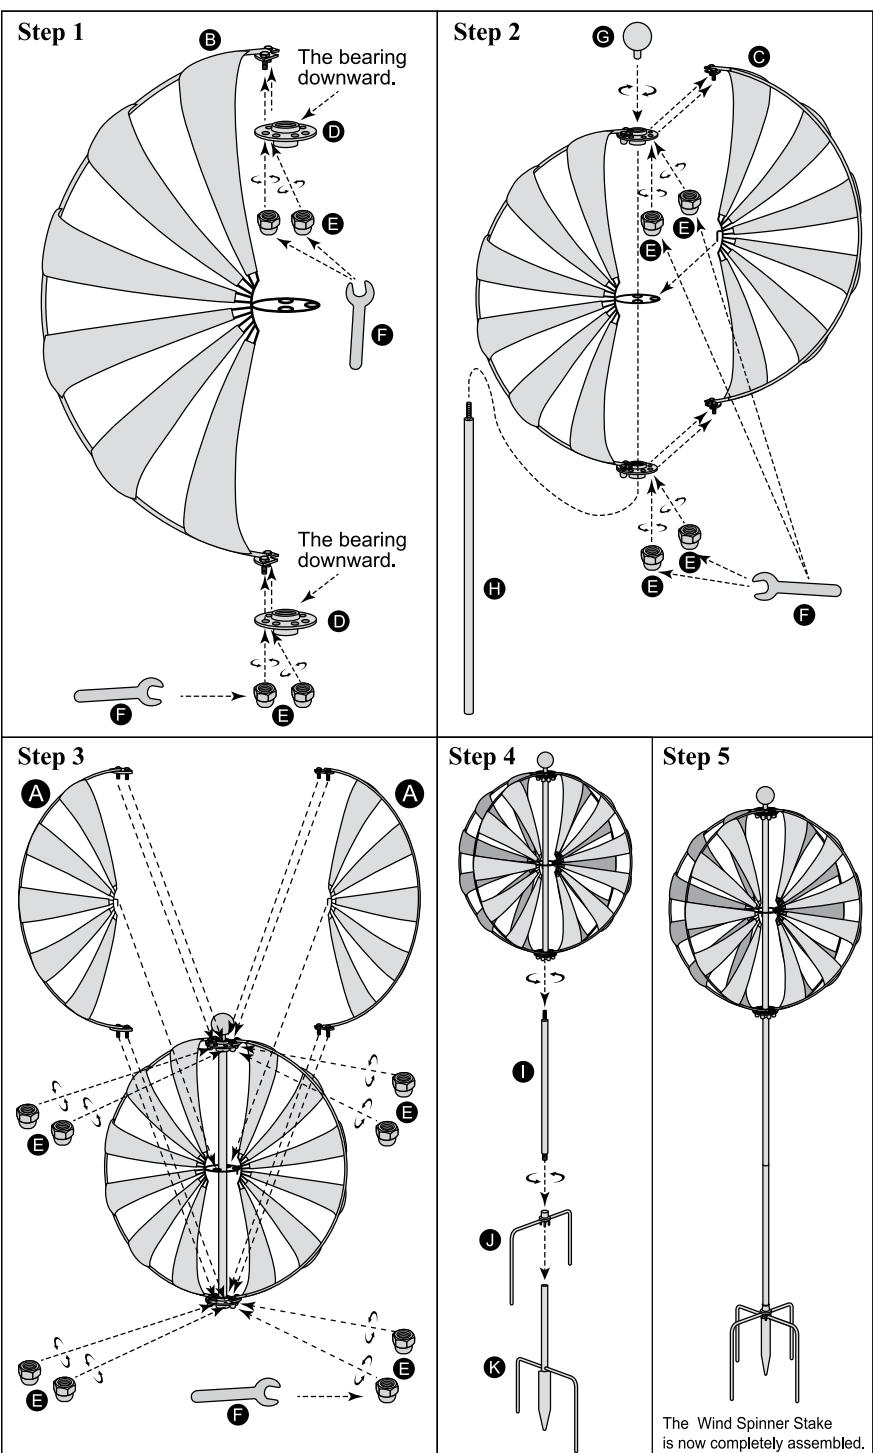

WARNING: Do not leave out in high winds as it may damage the product.
Note: Before staking into the ground, make sure the ground is soft. If the ground is not soft, moisten the ground with water.