

Assembly Instructions

1) Locate the part of the Cord (1) that the plug is on. It can be found on the back of the Lamp Base (2), close to the bottom.

2) Pull the Cord (1) (with the plug) away from the Lamp Base Bottom (2) until the Neck (3) reaches the top of the Base (2).

3) Screw the Neck (3) of the lamp into the Base (2). Pull the cord taut and screw in the neck until it becomes secure.

4) Add the Harp (4) on to the saddle located on the Neck (3)

5) Add the Shade (5) onto the Harp (4)


6) Add the Finial (6) onto the Harp (4)

****Please note that the screw, that attaches the Finial (6) to the Harp (4), is movable. If the shade appears to be askew, check this screw and adjust it – if needed – so it points straight up.***

CAUTION - Refer to the wattage caution label located near the lamp holder for recommended maximum wattage - Do not exceed recommended wattage.

WARNING - Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

IMPORTANT SAFETY INSTRUCTIONS This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

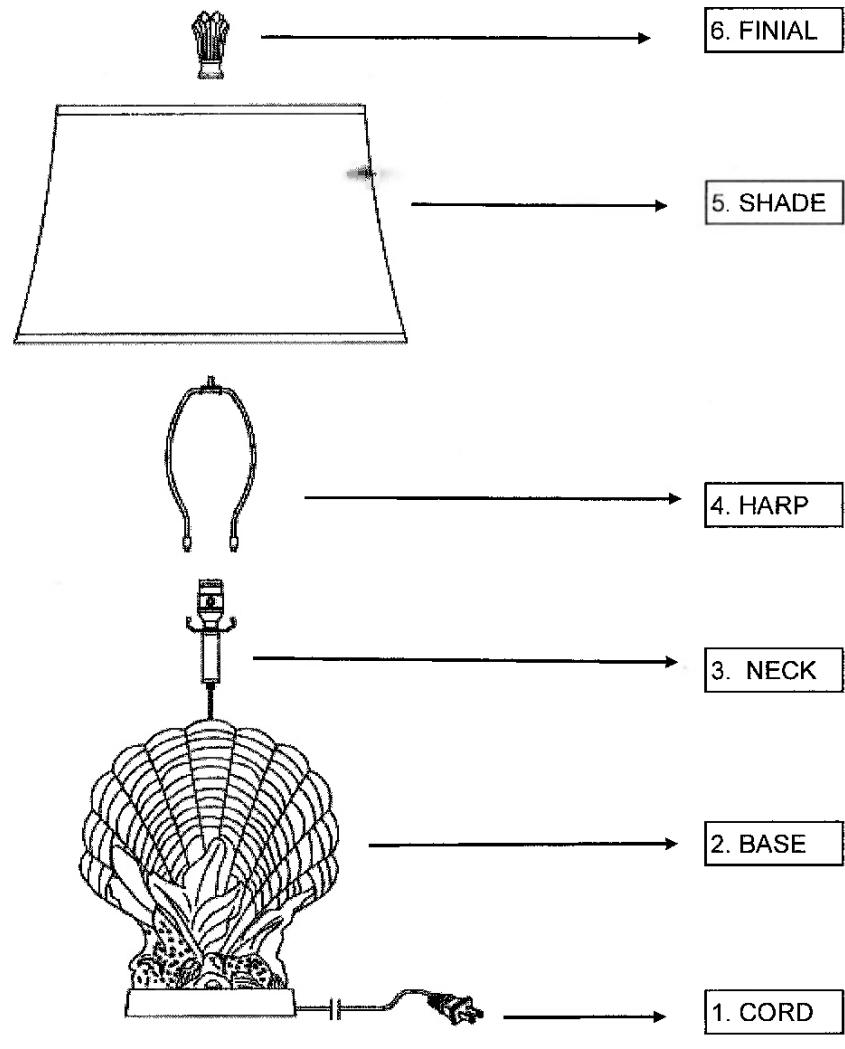

E26, Type A, 3WAY-150W (NOT INCLUDED)