the Adaptables for recessed lighting

INSTANT PENDANT LIGHT

Medium Base (PKN) Pendant

Español p. 4

PACKAGE CONTENTS

Part	Description	Quantity
A	Socket adapter	1
B	Spindle bracket	1
C	Canopy*	1
D	Compression nut	1
E	Socket ring	1
F	Glass shade*	1
G	Lamp cup*	1
H	Spacer ring (optional)	1

* Style and finish will vary by item.

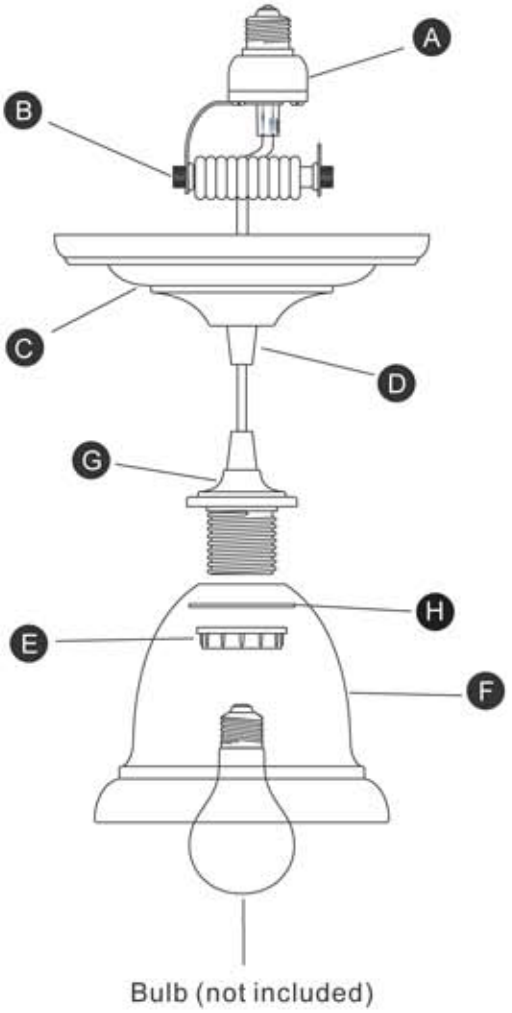

CLASSIFIED c UL us

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged. Do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 10-15 minutes
Helpful Tools:

ASSEMBLY INSTRUCTIONS

1. Adjust excess cord by wrapping it around spindle bracket (B) just below the socket adapter (A). Position the last wrap so the cord will hang in the center of your recessed light fixture.

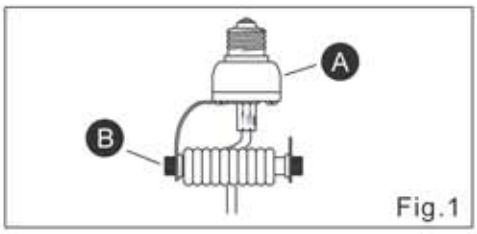

Fig.1

2. Screw the adapter (A) into the light bulb socket in your recessed light fixture.

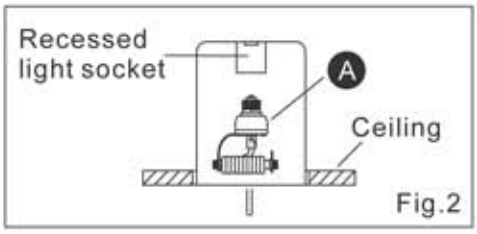

Fig.2

3. After finger loosening the compression nut (D) by turning it counter-clockwise, slide the canopy (C) up the cord and against the ceiling.

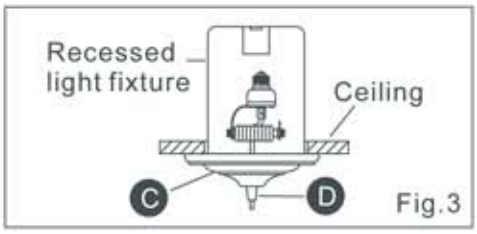

Fig.3

4. To hold the canopy in place against the ceiling, finger tighten the compression nut (D) by turning it clockwise.

   ⚠ **CAUTION:** Do not over-tighten the compression nut (D).

   HELPFUL HINT: If the canopy does not sit tight against the ceiling, loosen the compression nut (D). GENTLY pull down on the cord to flex the spring arm (B), then slide the canopy (C), back up and re-tighten.

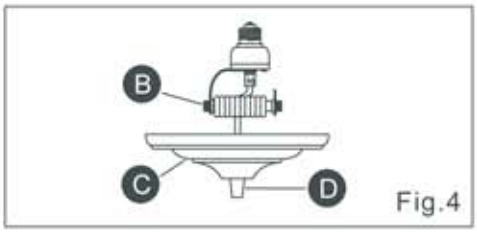

Fig.4

5. Attach glass shade (F) to the lamp cup (G), add spacer ring (H) if necessary, and then screw on the socket ring (E) clockwise until tight. Spacer ring (H) is only needed if glass shade (F) is loose when using just the socket ring (E).

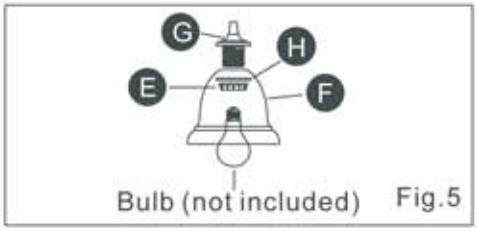

Fig.5

   ⚠ **CAUTION:** Do not over-tighten as it may result in breaking the glass shade.

CARE AND MAINTENANCE

Shut off light and let bulb and glass shade cool if necessary. Wipe glass shade with soft cloth or household glass cleaner. Do not use abrasive cleaners. For replacement bulbs, use 75 watt maximum, Type A or suitable medium base bulb (not included) including CFL bulbs.

⚠ WARNINGS AND CAUTIONS

WARNING

- Risk of fire or electrical shock. Do not alter, relocate, or remove wiring, lampholders, ballasts, or any other electrical component.
- Risk of fire or electrical shock. Install this kit only in the luminaries that have the construction features and dimensions shown in the photographs and/or drawings.

CAUTION

- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

TROUBLESHOOTING

Problem	Possible Cause	Corrective Action
Canopy does not fit tight against the ceiling	Cord has stretched out	Loosen the compression nut (D) and GENTLY pull down on the cord to flex the spring arm (B), then slide the canopy (C) back up and re-tighten
Bulb will not light	Bulb is burned out Power is off Bad switch	Replace light bulb (not included) Make sure power supply is on Test or replace switch

U.S. Patent No. 7,311,425

Printed in China