



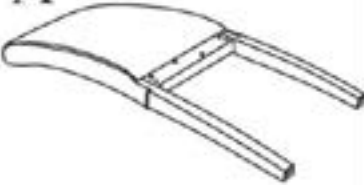
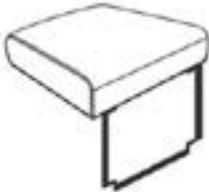







Chintaly Imports.

GENERAL INFORMATION

PLEASE READ THESE ASSEMBLY INSTRUCTION PRIOR TO ASSEMBLING.

TO AVOID DAMAGE, ASSEMBLE THE CHAIR ON A NON-ABRASIVE SURFACE, EG, A CARPET
MAKE SURE ALL BOLTS ARE TIGHTLY FASTENED BEFORE THE CHAIR IS USED.

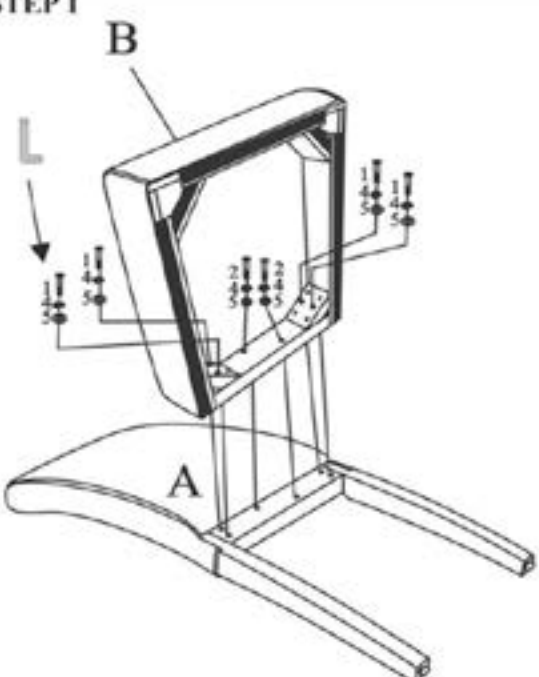
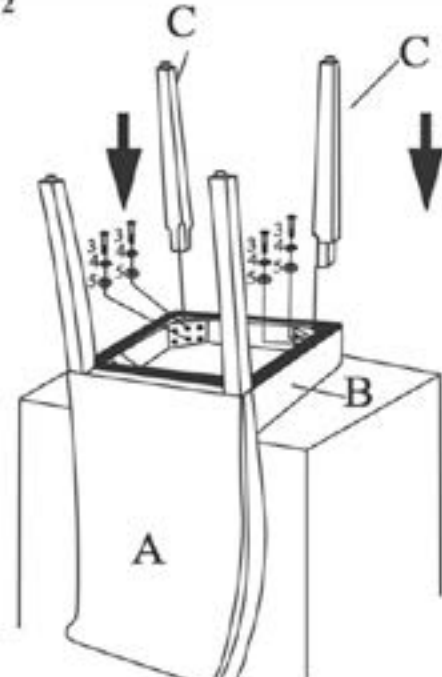
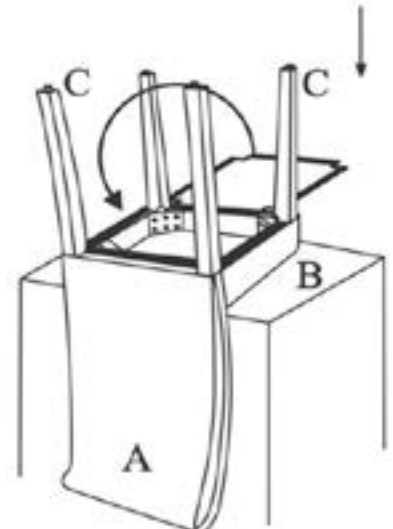

* PART AND HARDWARE LIST

A 		B 		C 	
Chair Back	1PC	Seat	1PC	Front Leg	2PCS
1  8mm in Dia. X 85mm in L.		2  8mm in Dia. X 65mm in L.		3  8mm in Dia. X 60mm in L.	
Long Bolt	4PCS	Middle Bolt	2PCS	Short Bolt	4PCS
4 		5 		6 	
Spring Washer	10PCS	Flat Washer	10PCS	Allen Key	1PC

Assembly Instructions

ITEM NO.: MONICA-PRS-SC

Do not fasten any screws until the chair is fully assembled.

<p>STEP 1</p> 	<p>STEP 2</p> 
<p>Attach the Seat (B) to the Chair Back (A) using four Long Bolts (1), two middle Bolts (2), six Spring Washers (4) and six Flat Washers (5), and with the provided Allen Key (6).</p>	<p>Place the Seat (B) upside down on a non-abrasive table surface. Assemble the Front Legs (C) to the front of the Seat (B) using four Short Bolts (3), four Spring Washers (4) and four Flat Washers (5), with the provided Allen Key (6).</p>
<p>STEP 3</p> 	<p>STEP 4</p> 
<p>Place the Vinyl Flap to the bottom of the Seat (B), using the adhesive strip as shown.</p>	<p>Finally, ensure the Chair is level on the floor and then fully tighten all the Bolts. Now the chair is completely assembled.</p>