

Assembly Instructions

Britannia Mirrored Wall Sconce


H576 AI WS

- 3) Use your mounting hardware to hang.

- 1) Screw the candle plate onto the arm.



1.

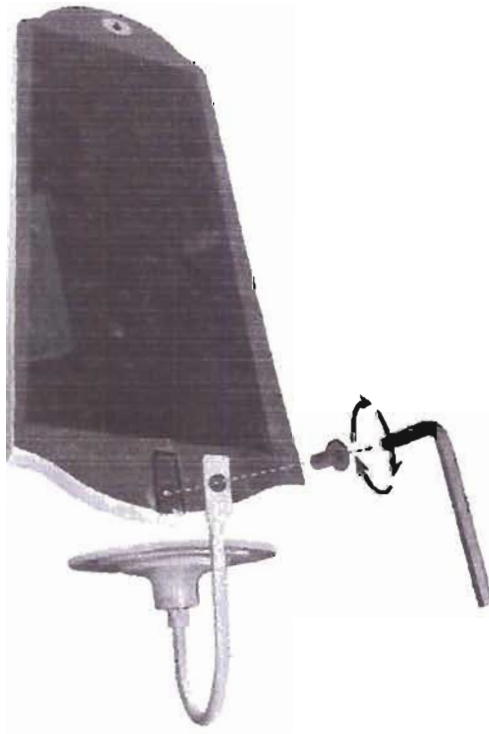

2.

- 2) Bolt the arm to the back of the sconce using the bolt and the included Allen wrench.

