








Touch of Class[®]


A Home Like No Other[™]

Assembly Instructions

Part Required

A		1pc
B		4pcs
C		1pc

D		1pc
E		16pcs
F		12pcs
G		4pcs

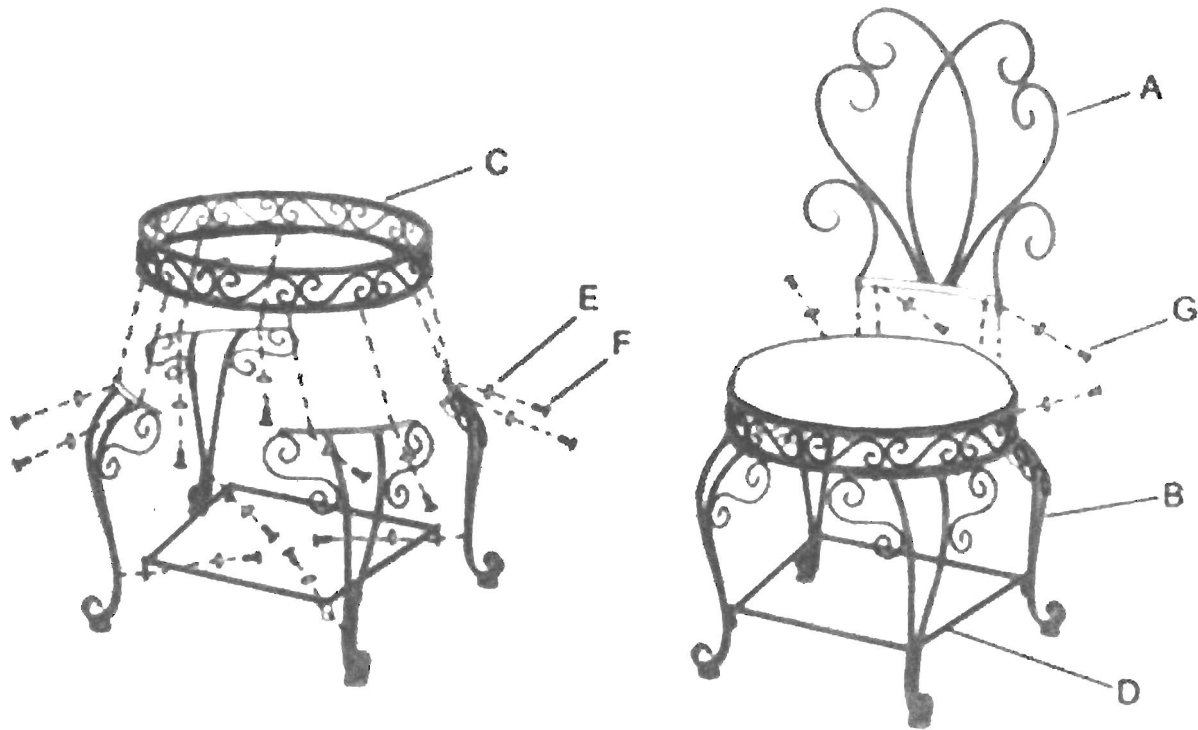

1. Take off all parts from carton carefully, especially cushion.
2. Attach metal cross (D) to 4 legs (B) by spring washes (E) first, then screws (F), do not tighten.
3. Attach metal apron (C) to 4 legs (B) by spring washes (E) first, then screws (F). Adjust stability and tighten all screws (F).
4. Attach metal back (A) to the back of metal apron (C) by spring washes (E) first, then screws (G). Tighten.
5. Your metal chair is ready for use.