




Assembly Instructions

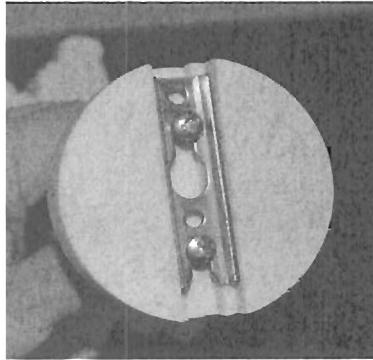


Un screw 1/4 turn
and remove brass mounting plate

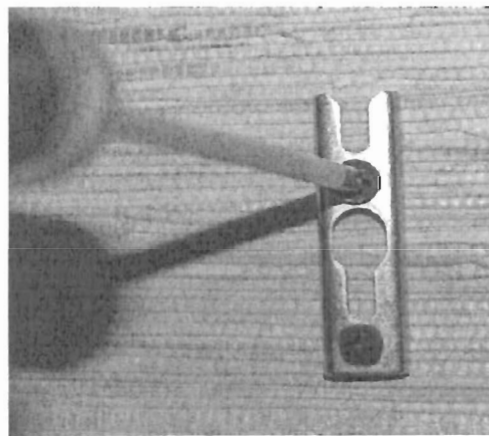

Attach mounting plate to wall
with mounting screws (2)

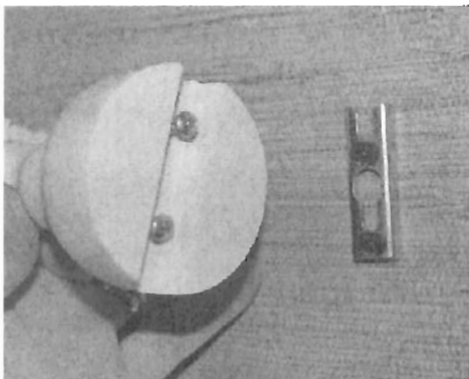

Slide stem screws into the plate
and push down to lock in place

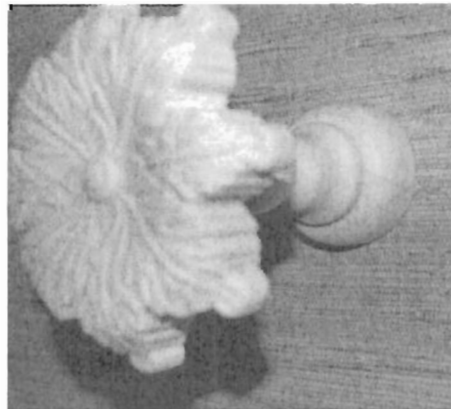

Attached Tieback

Please note: This diagram illustrates the setup of your new tiebacks.
It is a representative drawing and not intended to match the style of your new tieback.