











Lunah Vanity Chair

Parts required

1		Small Leg Bolts	Φ6*10MM	12pcs
2		Large Back Bolts	Φ6*15MM	2pcs
3		Allen wrench		1pc

A-D Legs		4pcs
-------------	---	------

Center Support Bar		1pc
Seat/ Stool Top		1pc
Back		1pc

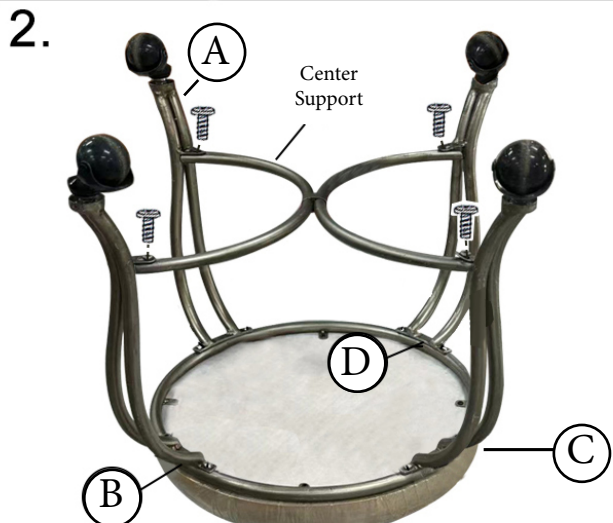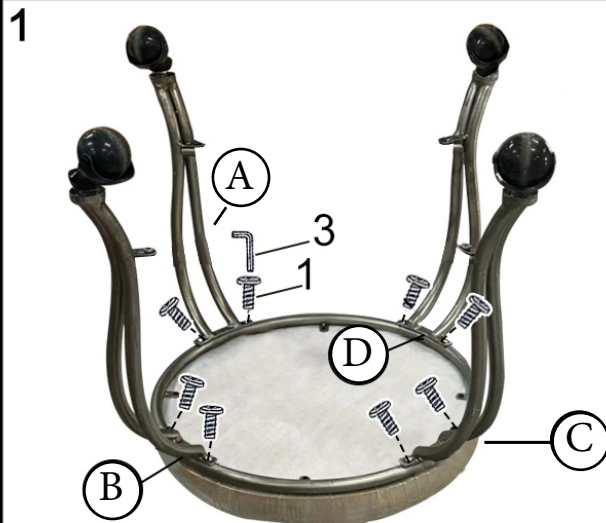

1. Remove all parts from the package. Please sort all of the hardware.
2. Place the stool top on a clean surface. Then take the legs (each one has a letter label indicator, shown in image with arrows) and match the labeled legs to the appropriate letter indicators on the seat/stool top. Attach using the smaller leg bolts (1) loosely with Allen wrench (3).
3. Attach the center support bar to the legs in the appropriate location with the smaller leg bolts (1) using the Allen wrench (3). Each center support bar has letter label indicators, shown in image with arrows. Tighten leg bolts.
4. Turn over and attach the backrest to the seat/stool top with the longer back bolts (2) using Allen wrench (3).
5. Tighten all bolts. Your vanity chair is ready to use.

