


Madden Vanity Stool

Parts required


1		Bolt	Φ6*10MM	8pcs
2		Allen wrench		1pc

A		4pcs
B		1pc
C		1pc

1.

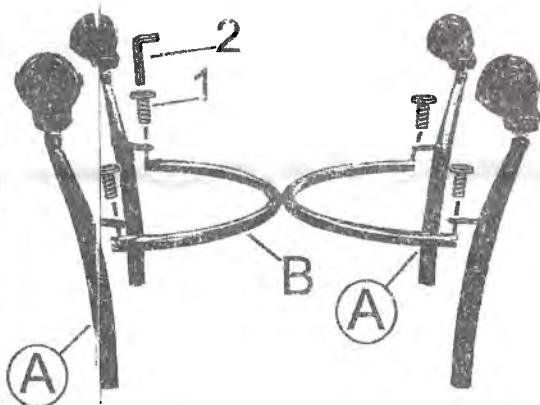

4.

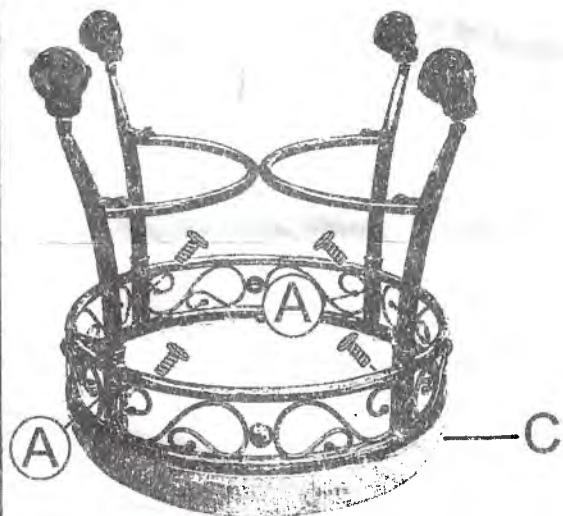

1. Take of all parts from package, do not miss anything.
2. Place the stool top (C) on a clean, soft surface. There are four labels (A), two on legs and two on the stool top (C), match together then attach with bolt (1) by allen wrench (2). Then do the other two legs.
3. Attached the cross bar (B) to the legs (A) with bolt (1) by allen wrench (2). Do not tighten.
4. Turn over and tighten all bolts. Your vanity chair is ready for use.