


Thank you for purchasing the Pathways Driveway Marker.

We have taken great care to manufacture this personalized driveway marker just for you. Please review the assembly instructions below. We hope you enjoy your new driveway marker.

Step 1:

Place pathways mounting post in desired location.


Then using a rubber mallet and a block of wood to protect the post, hammer the post into the ground to the desired height.

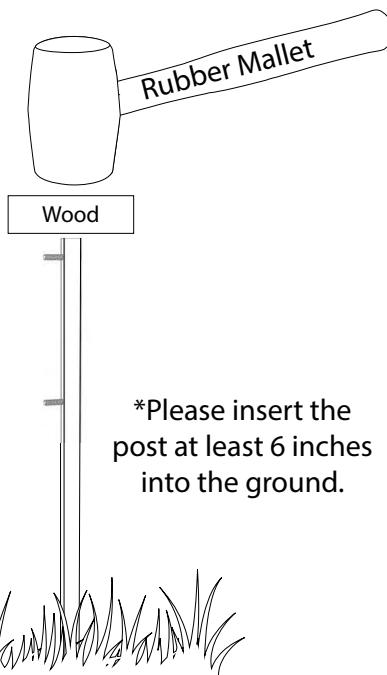

Step 2:

Locate the included mounting hardware. Attach the driveway marker to the post by first putting a spacer on each stud, then the driveway marker plate and finally the cap nuts.

Be careful not to over tighten.

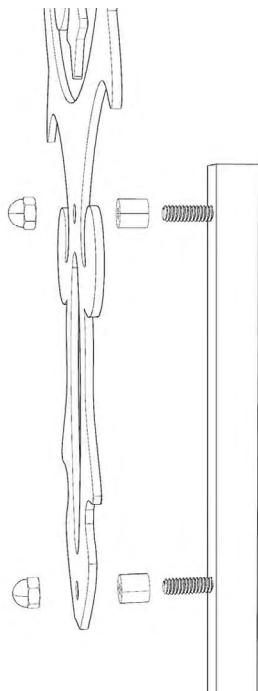

Designed By

Jason
Studios®

Exclusively for Touch of Class®

Made in the USA

TOC20240320