


## Lanora Vanity Chair


ITEM NO: DP21

### Parts required


1		Bolt	Φ8*10MM	12pcs
2		Bolt	Φ8*15MM	2pcs
3		Allen wrench		1pc

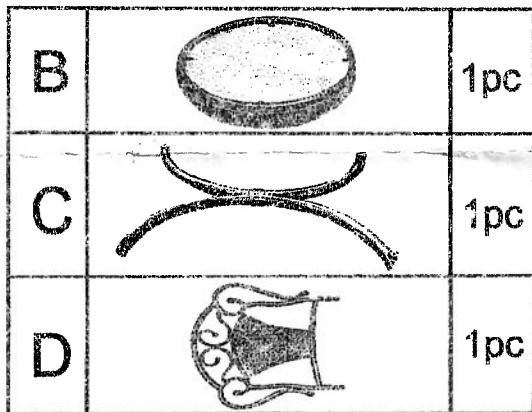


1

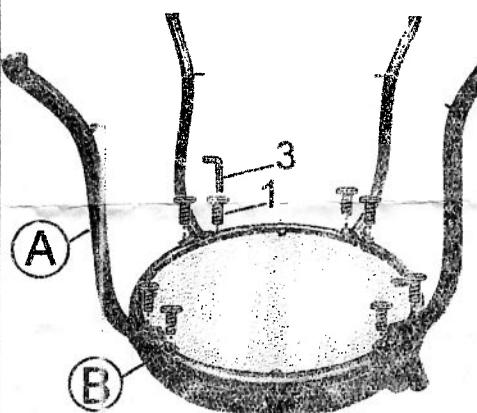

2.

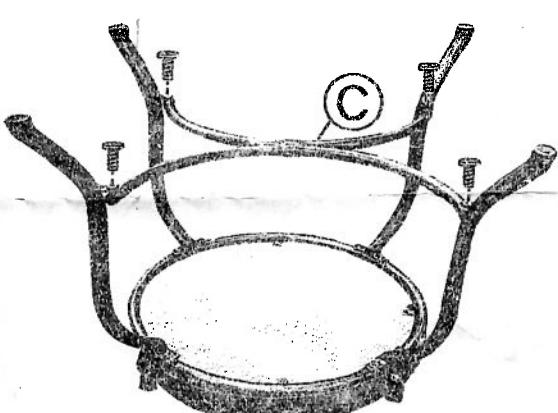

3.

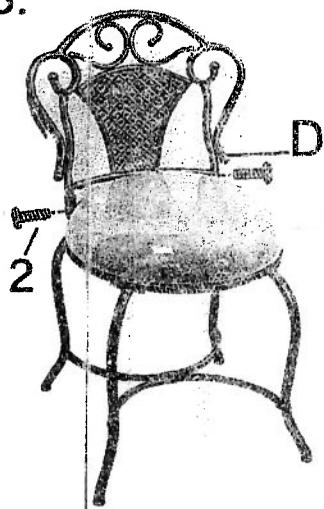

1. Remove all parts from the package. Be careful not to miss anything.

2. Place the stool top (B) on a clean surface. Then take the legs (A) and match the labeled front legs to the (A) indicator on the seat. *Please note: Two legs have labels and two legs do not. The labeled legs are the front legs.* Then match the other two legs (A) to the back of the seat. Attach with bolt (1) with the Allen wrench (3).

3. Attach the cross bar (C) to the legs (A) with bolt (1) using the Allen wrench (3).

4. Turn over and attach the backrest (D) to the stool top (B) with bolt (2) with the Allen wrench (3).

5. Tighten all bolts. Your vanity chair is ready to use.