






ASSEMBLY HARDWARE


A		Bolts	8 PCS
B		Lock Washers	8 PCS
C		Metal Washers	8 PCS

TOOLS REQUIRED

D		Open Wrench	1 PC
		Screwdriver (not included)	

Components

E	Cabinet	1 PC
F	Front Legs	2 PCS
G	Back Legs	2 PCS

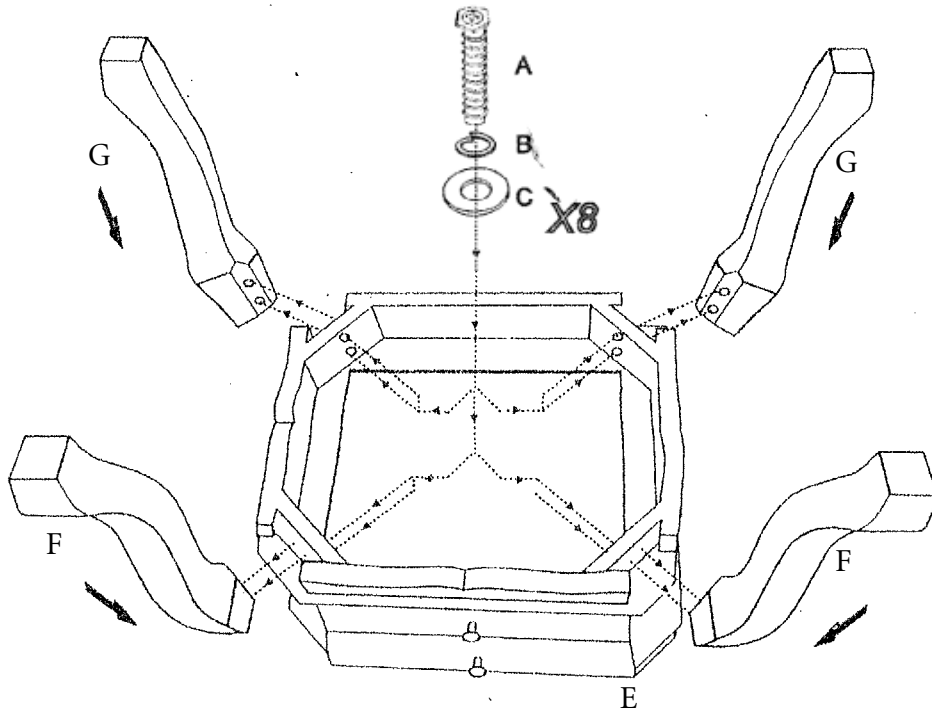

Picture of the Front Legs (F).

Please note: Front Legs have a curved, more flared top.



Picture of the Back Legs (G).

Please note: Back Legs have a straight, more flat top.



A. Carefully place the Cabinet (E) upside down on a soft surface.

B. Align the holes in the Back Legs (G) and Front Legs (F) with the corresponding holes.

*****Please note* The legs and cabinet base may have numbered stickers --these may not be correct. Please follow these instructions for easy assembly.*****

C. Secure each leg with 2 Bolts (A), 2 Lock Washers (B), and 2 Metal Washers (C) using the Open Wrench (D) and your screwdriver.

D. Carefully turn the Cabinet right side up. Assembly is now complete.

Cleaning and Care: To preserve your painted finish, please remove dust with a soft, damp cloth. Do not use cleaners as they may damage the finish.