


# CLEAR SASH ROD INSTALLATION INSTRUCTIONS

## PARTS LIST:

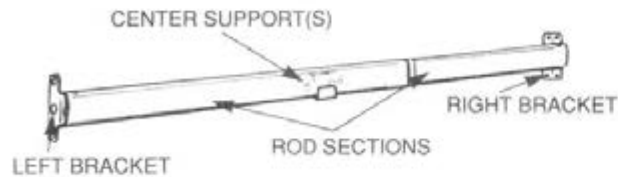


You should have the following items:

Left Bracket	(2)
Right Bracket	(2)
Rod sections	(4)


Center Supports	
7"-11 1/2" Rods	(0)
12"-20" Rods	(0)
20"-36" Rods	(2)
28"-48" Rods	(2)

STEP 1: Be sure to remove all parts from package. Compare with the parts list to make sure.

STEP 2: Attach Right and Left Brackets to wall or window frame. Attach **ALL** Center Support(s) evenly spaced between Right and Left brackets.

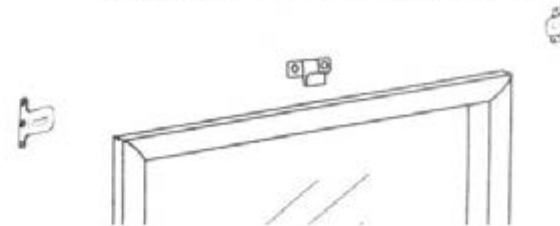

STEP 3: Place rod between brackets. Extend rod and push onto Right and Left Brackets. Rod should rest in Center Support(s).

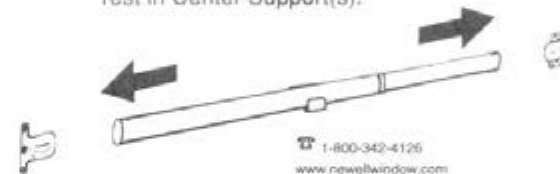

1-800-342-6126

[www.newellwindow.com](http://www.newellwindow.com)

Exported by/Exportado por/Exportado por:  
Kirsch • Freeport, IL 61032 USA

Imported by/Importado por/Importado por:

Kirsch • Prescott Ontario, K0E 1T0 Canada

Imported by/Importado por/Importado por:

Newell Rubbermaid Mexico

Made in Thailand • Fabricado en Tailandia • Hecho en Tailandia

KIRSCH

A Division of  
**Newell Rubbermaid**

© 2000™ and ®, Reg. TM, Newell Rubbermaid, Freeport, IL 61032