








ASSEMBLY INSTRUCTIONS

ITEM NO.: M30701

Parts required

A		6pcs	E		1pc
B		6pcs	F		2pcs
C		6pcs			
D		1pc			

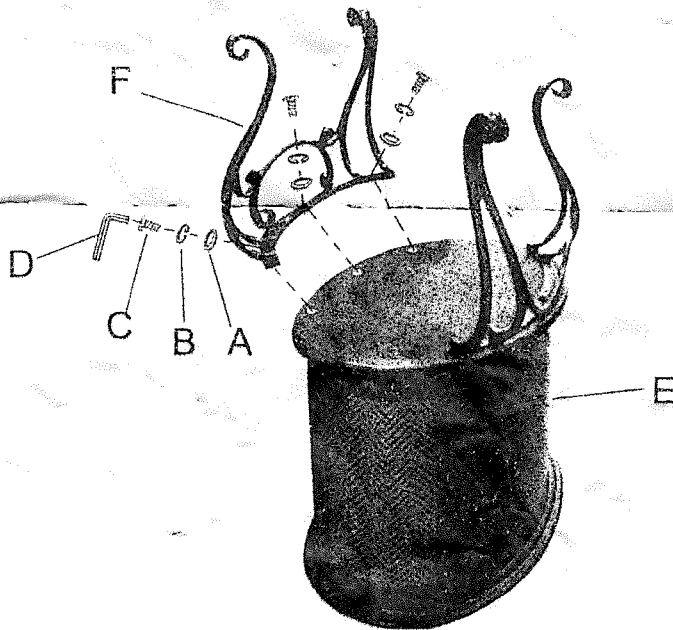

- 1 Take out all parts from carton, please be careful to not throw away the hardware packet.
- 2 Place Top of cabinet (E) on a clean, flat surface, attach Legs (F) to Top cabinet (E) by flat washer (A) first, then spring washer (B), then allen bolts (C). Use allen Key (D) to screw into. Do not tighten.
3. Turn over the cabinet and adjust stability and tighten the bolts as needed. The cabinet is ready for use.