










Touch of Class®

A Home Like No Other™

Assembly Instructions

Parts Required

A		1 pc	C		1 pc	E		1 pc	G		2 pcs
B		4 pcs	D		1 pc	F		1 pc	H		12 pcs

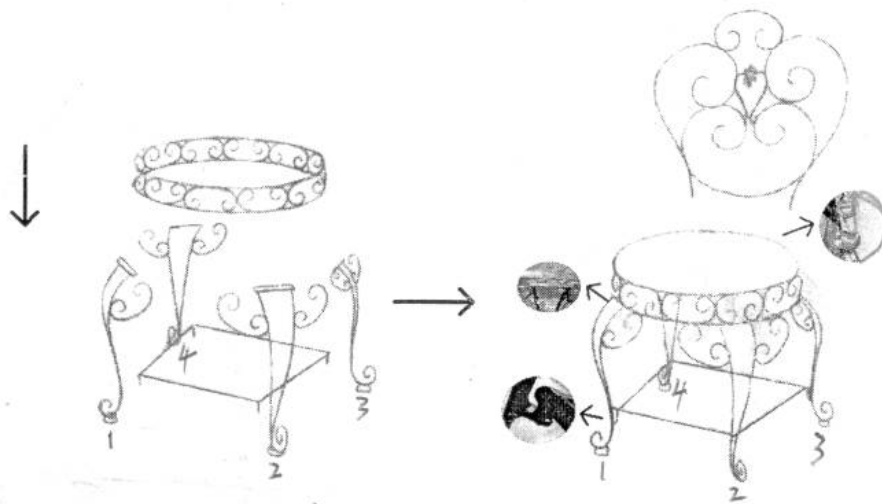

1. Remove all parts from carton carefully, especially the cushion.
2. Lock metal apron (C) to 4 legs (B) with small acorn nuts (H) using the small wrench (F). Adjust stability and tighten all acorn nuts (H).
3. Lock metal cross (D) to 4 legs (B) with small acorn nuts (H) using the small wrench (F). Do not tighten.
4. Lock metal back (A) to metal apron (C) with big acorn nuts (G) using the big wrench (E). Tighten.
5. Your metal chair is ready for use.