

Assembly Instructions

Item#: XSC16305-GD031A CFL

CAUTION:

Read instructions carefully and turn electricity off at main circuit breaker

panel before beginning installation

WARNING

All wires are connected. When unpacking box, be careful not to pull wires,

As a bad connection may result. Do not connect electricity until lamp is fully

assembled. Unpack and place all parts on a surface or floor

ASSEMBLY INSTRUCTIONS:


- 1) Place the lamp on a level surface.
- 2) Screw Threaded Rod into the Socket assembly.
- 3) Put the Washer onto the Threaded Rod.
- 4) Place the Shade over the end of the Threaded Rod and screw the Finial securing the shade in place.
- 5) Insert bulb into the bulb socket.

Recommended (2) 13-watt to 15-watt standard base CFL Bulbs.(13-watt CFL bulb included)

Important Safety Instructions:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician

Never use with an extension cord unless the plug can be fully inserted.

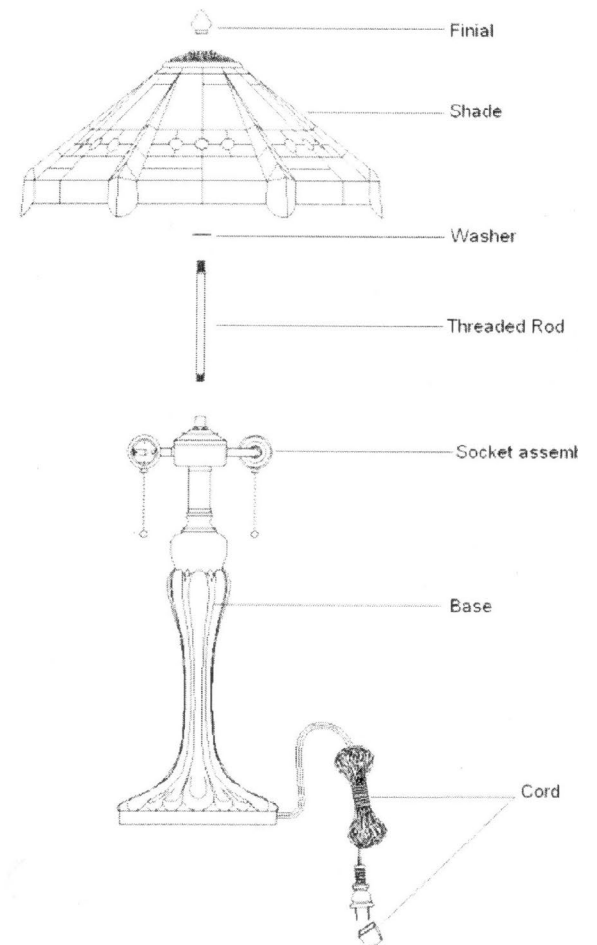

TOC20140808

