






Ind. Inc.


**ASSEMBLY INSTRUCTIONS  
MODEL # LV6153-24  
COUNTER STOOL**

**LIST OF PARTS**

NO.	Q.TY	DESCRIPTION
A	1 PC.	CHAIR BACK
B	1 PC.	WOOD SEAT
C	1 PC.	FRONT LEG RIGHT
D	1 PC.	FRONT LEG LEFT
E	1 PC.	FRONT STRETCHER
F	2 PCS.	SIDE STRETCHER
G	4 PCS.	K.D.SCREW ( LONG )
H	3 PCS.	K.D.SCREW ( SHORT )
I	11 PCS.	FLAT WASHER
J	11 PCS.	LOCK WASHER
K	4 PCS.	NUT
L	6 PCS.	WOOD SCREW
M	1 PC.	KEY WRENCH

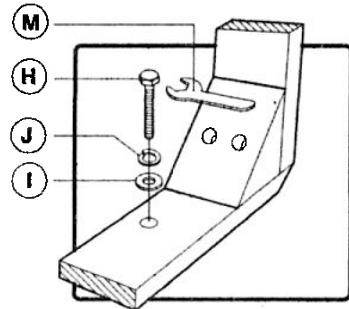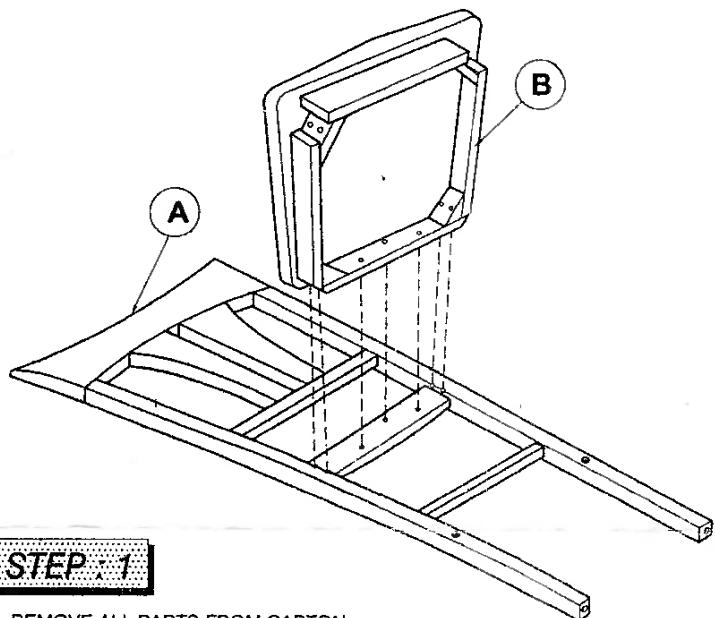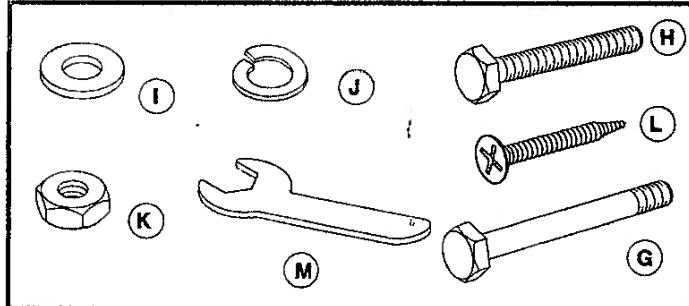


**DETAIL : A**

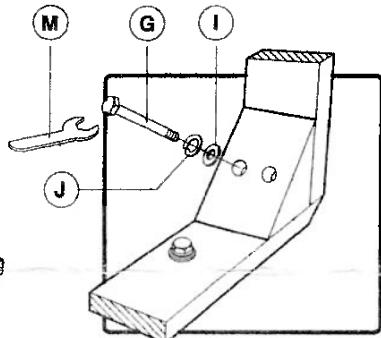


**DETAIL : B**

**STEP : 1**


- REMOVE ALL PARTS FROM CARTON.
- OPEN CARTON SO THAT IT CAN BE USED AS WORK SURFACE FOR ASSEMBLY.
- PLACE THE CHAIR BACK **(A)** ON THE CARTON.
- PLACE THE WOOD SEAT **(B)** ON THE CHAIR BACK **(A)** AND INSERT A FLAT WASHER **(G)**, LOCK WASHER **(J)** AND A SHORT K.D.SCREW **(H)** INTO EACH OF THE 3 HOLES ON BACK OF THE SEAT TIGHTEN THE SCREW WITH THE KEY WRENCH **(L)** BY TURNING CLOCKWISE UNTIL SECURE. ( SEE DETAIL : A )
- INSERT THE FLAT WASHER **(I)**, LOCK WASHER **(J)** AND LONG K.D.SCREW **(G)** INTO EACH OF 2 HOLES IN THE SEAT CORNERS. TIGHTEN THE SCREWS WITH THE KEY WRENCH **(M)** ( SEE DETAIL : B )

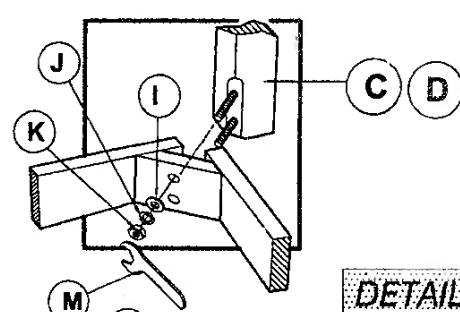

**DETAIL : C**

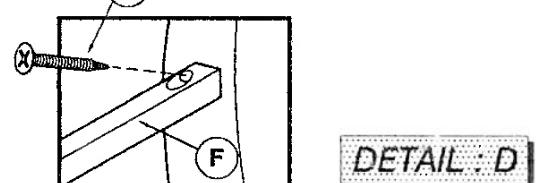

**DETAIL : D**

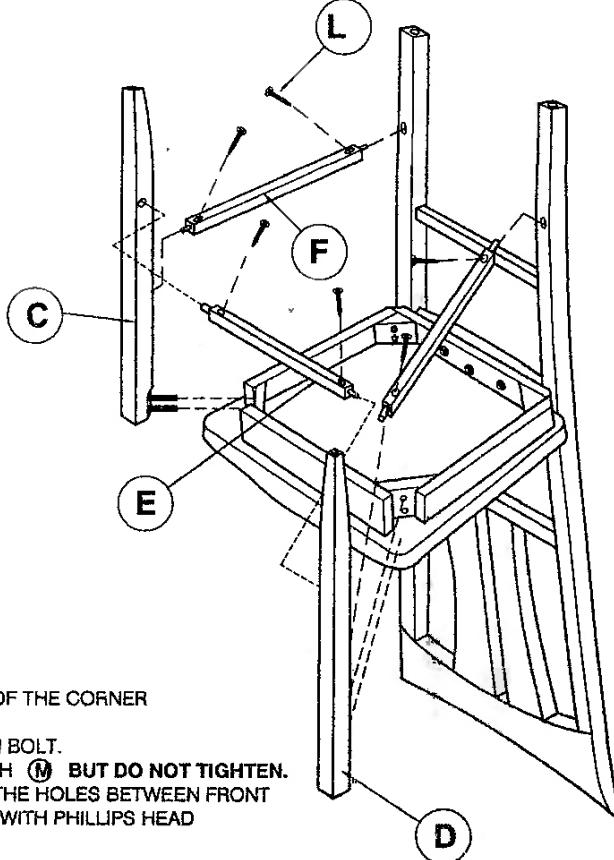

**STEP : 2**

- TURN OVER THE CHAIR AND ATTACH THE LEGS **(C)** TO THE FRONT OF THE CORNER SEAT FRAME.
- PLACE FLAT WASHER **(I)**, LOCK WASHER **(J)** AND NUT **(K)** ON EACH BOLT.
- TURN THE NUT **(J)** ON EACH LEG SEVERAL TURNS WITH KEY WRENCH **(M)** BUT DO NOT TIGHTEN.
- INSERT 2 SIDE STRETCHERS **(F)** AND FRONT STRETCHER **(E)** INTO THE HOLES BETWEEN FRONT AND BACK LEG AND FASTEN WITH WOOD SCREW **(L)** ON EACH END WITH PHILLIPS HEAD SCREWDRIVER. ( NOT PROVIDED )
- TIGHTEN ALL SCREWS BEFORE USING STOOL.